

CAM CLUTCH GEAR INSPECTION

1. Remove the 4 bolts (1) securing the clutch end cap to the winch as pointed out in Figure 1.
2. Pull the last section of the gear housing off and remove any grease that might be obstructing the cam clutch gear from view.
3. Once the cam clutch gear is clean, take clear photos of the gear as shown in Figure 2. Send the picture(s) to tech@kfiproducts.com

Figure 1



Figure 2

