

PLOW ACTUATOR SERVICE PIN

PART # 106070

Kit Components:

Item #	Qty.	Description
1	1	CLEVIS PIN 9/16 x 3"
2	1	HITCH PIN CLIP

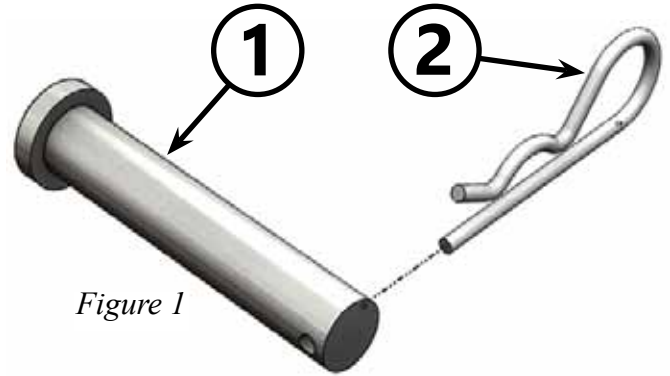


Figure 1

INSTALLATION INSTRUCTIONS:

1. Once the plow actuator has been removed, align pin hole (A) in pivot plate to your desired blade angle as shown in **Figure 2** by manually rotating the blade.
2. Place Clevis Pin (1) through pin hole location (A) from the bottom up as shown in **Figure 3**. Once pin is in place attach Hitch Pin Clip (2) as shown in **Figure 4**.

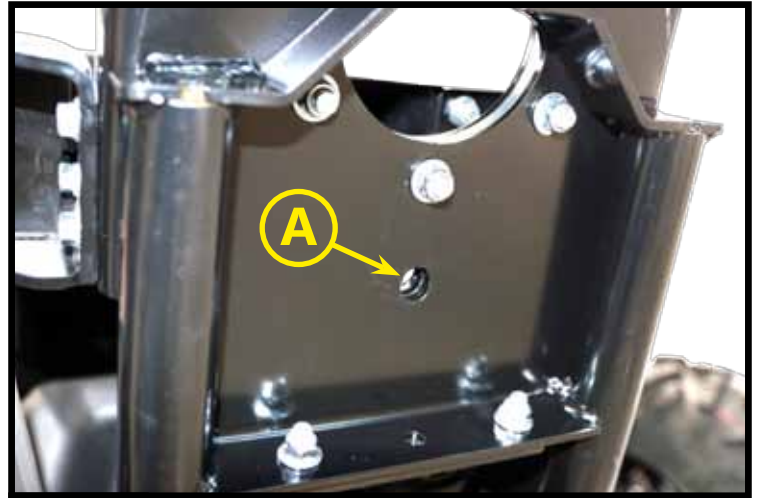


Figure 2

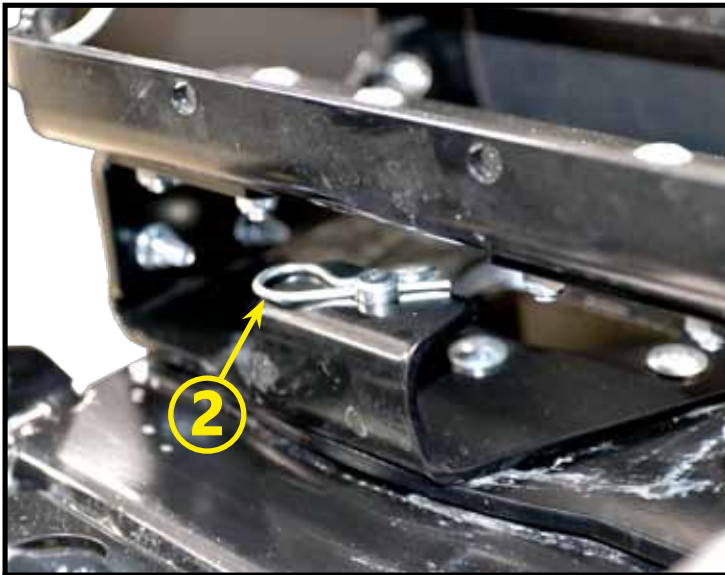


Figure 4



Figure 3

