

The wireless winch remote can be replaced if lost or damaged. The new remote must be re-programmed to communicate with the existing transmitter.

Here is the procedure for re-programming a replacement wireless winch remote.

1. The power supply to the winch must be on
2. Turn Remote ON by holding the ON/OFF button for 3 sec
3. Press and hold both the IN **and** OUT button for 20 sec (then LED flashes 1X per sec)
4. Press and hold both the IN **and** OUT button for 3 sec

Notes:

- LED will turn off when **IN/OUT** are first pressed in step #4
- After 3 s the LED will turn back on
- The Remote is now re-programmed