



# WINCH LEAD ROTATION

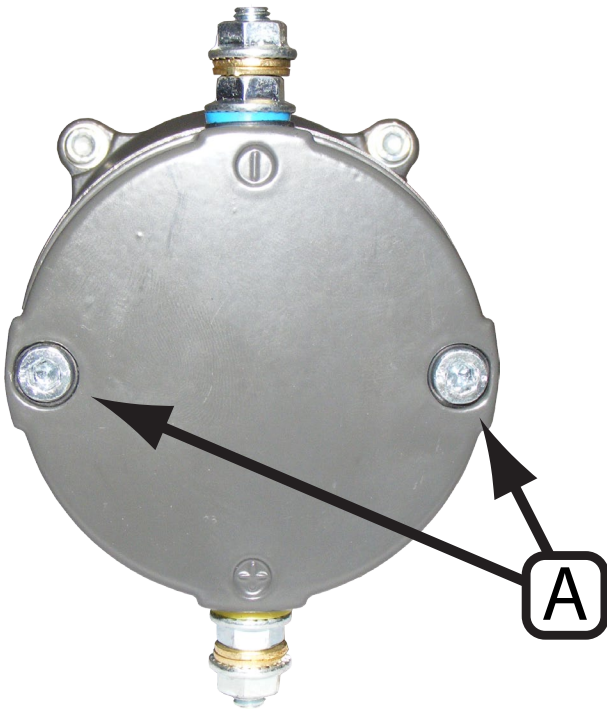

“Figure 1”


1. Remove bolts (A) on motor end cap as shown in Figure 1&2.

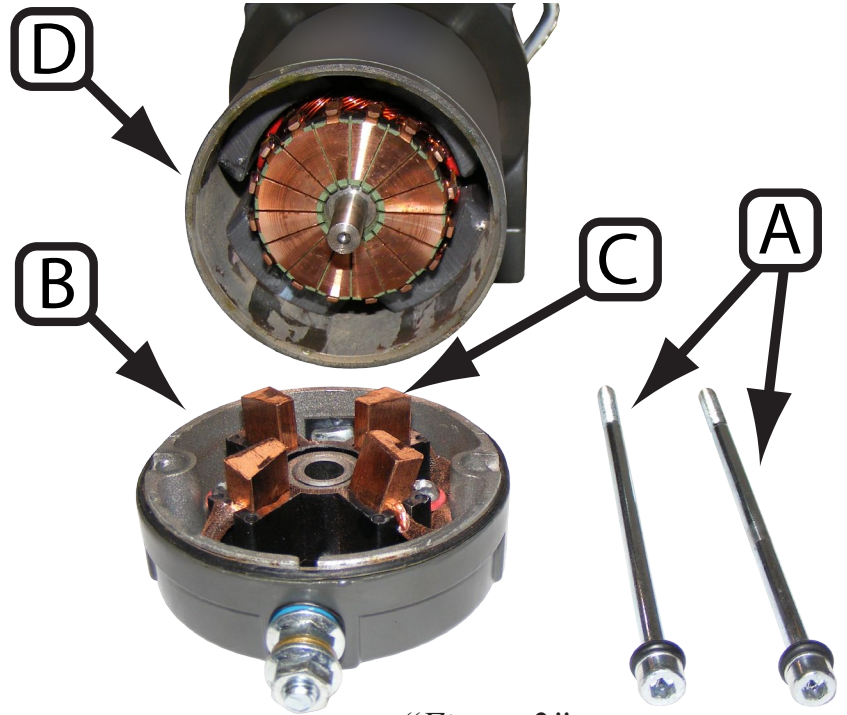

“Figure 2”


2. Remove motor end cap (B) and rotate 90 degrees. Make sure that the brushes (C) are seated properly be for reinstalling end cap.

*Note: On some winches you may need to rotate the motor housing (D) as the magnets are not always spaced the same.*

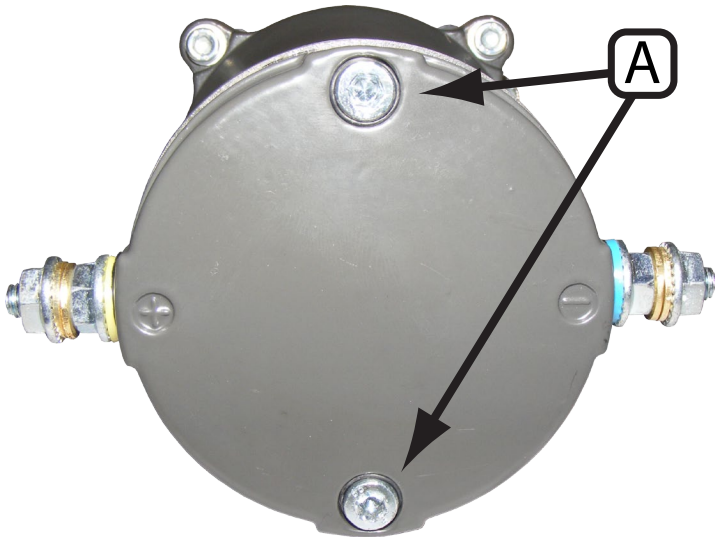

“Figure 4”

3. Reinstall bolts (A) and tighten down.

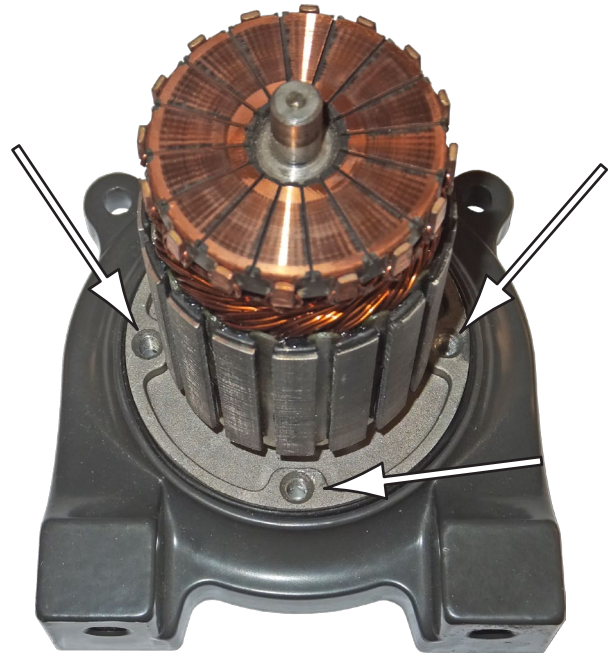

“Figure 3” Threaded Rotation Holes