



SYNCING KFI-WRC WINCH REMOTE

WIRELESS WINCH REMOTE




NOTE:
A 4-DIGIT OR 6-DIGIT SERIAL NUMBER CAN BE FOUND ON THE BACK OF THE REMOTE AND THE BOTTOM OF THE RECEIVER. THESE 2 VERSIONS ARE NOT CROSS-COMPATIBLE. A 6-DIGIT REMOTE CAN ONLY BE PROGRAMED TO A 6-DIGIT RECEIVER AND VICE VERSA.

THE WIRELESS WINCH REMOTE CAN BE REPLACED IF LOST OR DAMAGED. THE NEW REMOTE MUST BE RE-PROGRAMMED TO COMMUNICATE WITH THE EXISTING TRANSMITTER.


STEPS FOR RE-PROGRAMMING:

1. In order to re-program the winch remote, the power supply to the winch must be on. If there is no power to the winch, there will also be no power to the transmitter. It is also recommended to put the winch in freespool mode.



TRANSMITTER

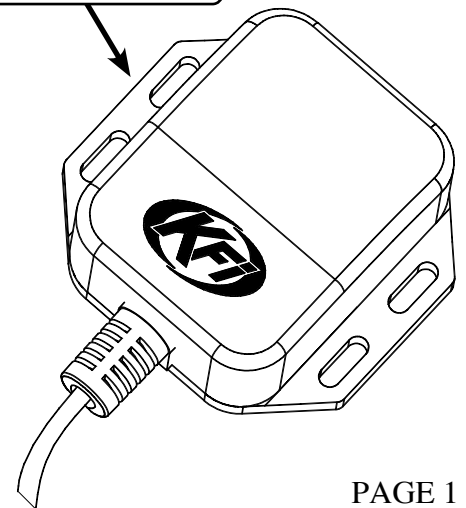



STEPS FOR RE-PROGRAMMING CONTINUED:

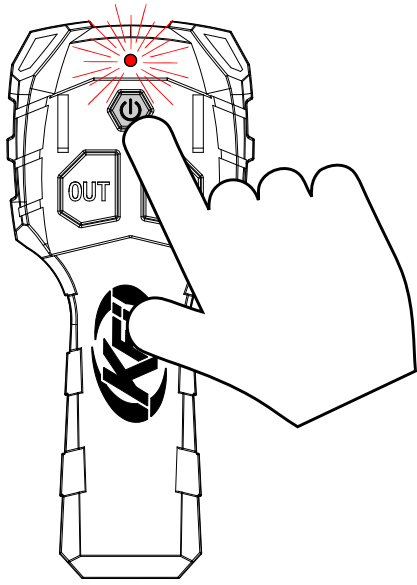

2. Turn the remote **ON** by holding the **ON/OFF** power button at the top of the remote for **3-4 seconds**. The red light at the top of the remote will turn on.

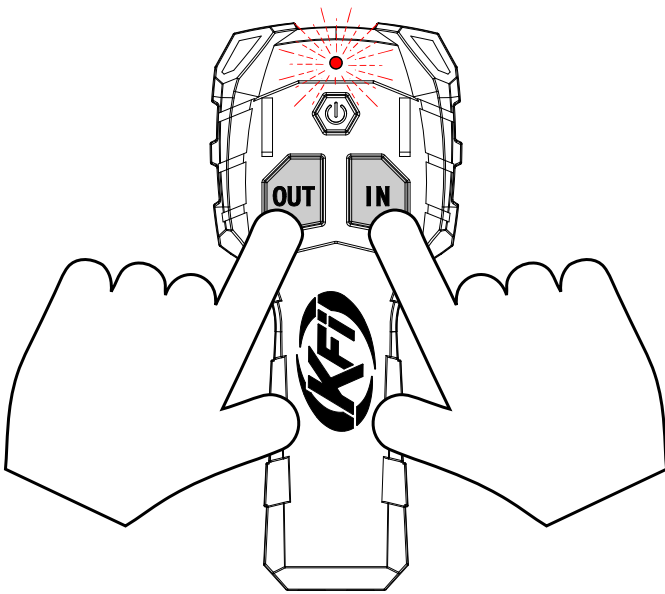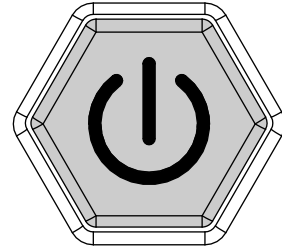

3. Press and hold *both* the **OUT** and **IN** buttons for **20 seconds**, then release the buttons. (*Once this step is started, the remote will flash for ~16-17 Seconds, the led will turn off, then turn back on at 20 seconds.*)

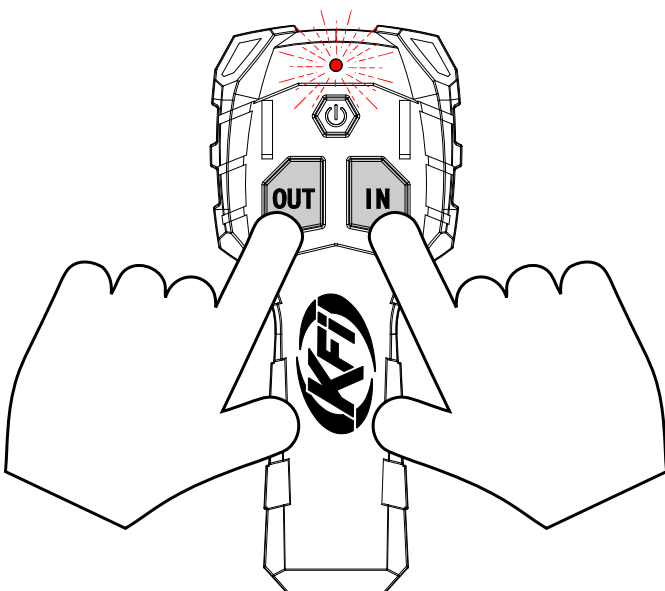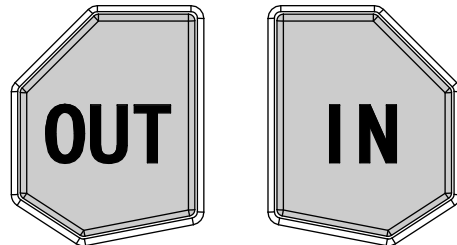

4. Press and hold *both* the **OUT** and **IN** buttons for **3 seconds**. (*Once this step is started, the remote light will turn off, then turn back on after the 3 seconds.*) Programming is now complete.

For questions or help:

Tech Support #: 1-877-346-2050 OPT. 2

Tech EMAIL: Tech@KFIproducts.com

