


GEN4 & ATP Double Tube Bumper

KFI Polaris Double Tube Bumper

PART # 100460

Kit Components:

<u>Qty</u>	<u>Part Description</u>
1.....	Double tube bumper
6.....	1/4-20 U-Nuts (D)
6.....	1/4-20 x 1.25" HH Bolt (E)
6.....	1/4" Flat Washers (F)
4.....	5/16-18 x 1.00" HH Flanged Bolt (G)
4.....	Tube end Plugs

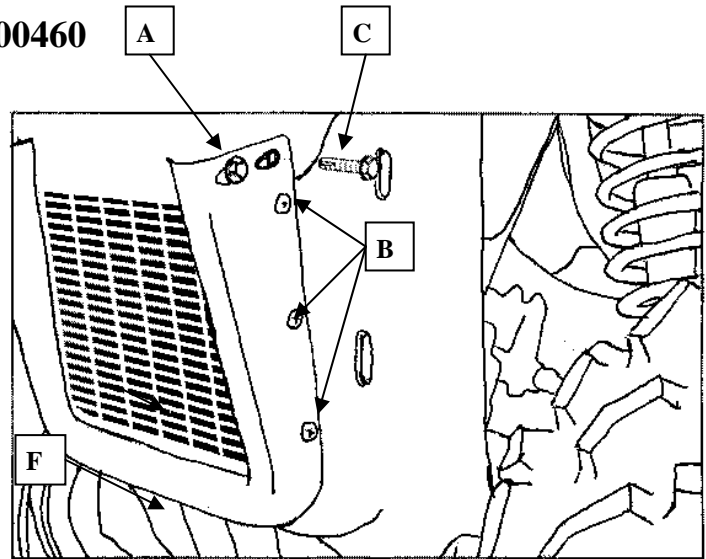

INSTALLATION INSTRUCTIONS:

1. Remove the two upper front bolts (A) of the ATV's brush guard.
2. Remove the six original Phillips head screws (B) retaining the side plastic shrouds and discard.
3. Loosen (do not remove) the two original upper rear bolts (C) of the ATV's brush guard and discard.
4. On the plastic shrouds remove the OEM U-Nuts and replace them with the Supplied black threaded U-Nuts (D).
5. The ATV's brush guard is loose and has adjustment so that you can move the brush guard in and out to line up all ten holes.
6. Place the bumper in position and attach the mount with the top holes first using the supplied 5/16" bolt (G) "Do not tighten".
7. Once the two top bolts are started you can reassemble the plastic shrouds using the supplied bolts (E) and washers (F) "Do not tighten".
8. Once all ten bolts are started you can tighten them.
9. Insert tube end Plugs.

