

Honda Rancher AT (IRS)

2" Receiver Hitch


Plow Mount

PART # 100815

Hardware Kit: HK-053

Kit Components:

Qty.	Part Description
1.....	2" Receiver
2.....	M10-1.5mm x 90mm Bolt
2.....	M10-1.5 Nylon Nut
16.....	3/8" USS Flat Washer
1.....	5/8" -11 x 1.5" Bolt
1.....	5/8" Lock Washer
1.....	5/8" SAE Flat Washer
1.....	5/8" Hitch Pin
1.....	R-Pin

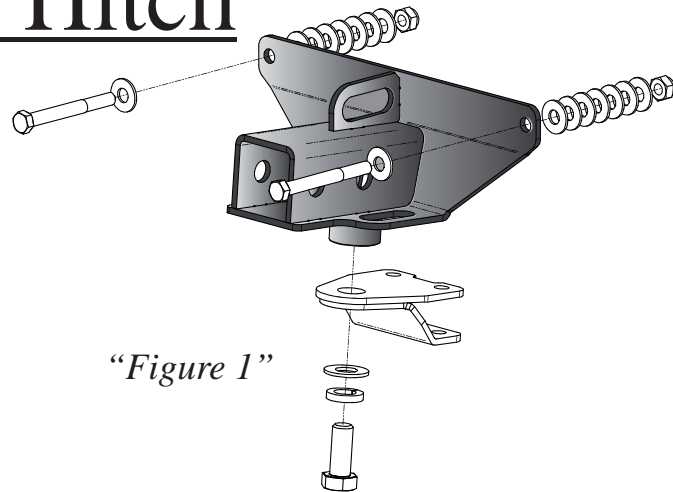

"Figure 1"

INSTALLATION INSTRUCTIONS:

1. Remove both 10mm bolts (A) as shown in Figure 2 and discard. Once bolts are removed be sure not to put any weight on the machine, as the A-Arms may move out of position.
2. Place the receiver into location as shown in Figure 1 and 3 lining up the hole in the OEM hitch and the threaded boss on the receiver.
3. Take the provided 10mm bolts and insert them through a provided 3/8" washer, the Kolpin Receiver, approximately (5-6) provided 3/8" washers, the A-Arm brackets, the A-Arms, and (1) provided 3/8" washer as shown in Figure 1.
4. Tighten the 10mm bolts securely, using the provided (2) 10mm nylock nuts. Make sure the OEM Hitch hole is still aligned with the receiver thread boss. If it is not you may need to remove or add additional provided 3/8" washers.
5. Take the provided 5/8" bolt and insert it through the provided 5/8" lock washer, flat washer, the OEM hitch hole and into the threaded boss on the Kolpin Receiver as shown in Figure 1. Tighten securely.
6. Place the Bent Hitch Pin through the receiver tube and secure by clipping the R-Clip through the hole on the bent hitch pin.



"Figure 2"



"Figure 3" Receiver Installed

