

POLARIS RANGER/BOBCAT **XUV REAR BUMPER**

PART # 100890 Hardware Kit # HK-034

Kit Components:

<u>Qty</u>	<u>Part Description</u>
1.....	Rear Bumper
1.....	RH Bumper Bracket
1.....	LH Bumper Bracket
4.....	Tube Caps
4.....	3/8" x 1" Carriage Bolt
4.....	3/8" x 3/4" Carriage Bolt
4.....	3/8" Flat Washer
8.....	3/8" Flanged Nylock Nut

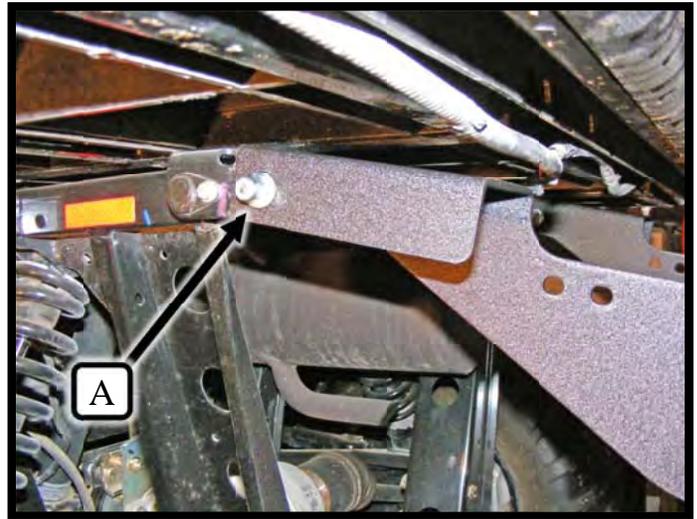


Figure 1

INSTALLATION INSTRUCTIONS:

1. Begin by assembling the tube caps to the bumper as shown in the Figure 3. This can also be done after the bumper is installed.
2. Place the bumper into location as shown in Figure 1. Loosely install 1" Carriage Bolts and Nuts (A).

Note: Washers are optional on 2008 and older Rangers for spacing of frame mounts.

3. Install bumper brackets using 3/4" Carriage Bolts and Flange Nuts (B) as shown in Figure 2 and 3. Brackets will be installed with square hole attaching to ranger frame and slotted square hole attaching to the bumper.

Note: Front hole (C) is for 2008 and older Rangers and rear hole (D) is for Ranger XP/Bobcat XUV. The frame mounts will go over the top of the brackets on your box frame as shown in Figure 1.

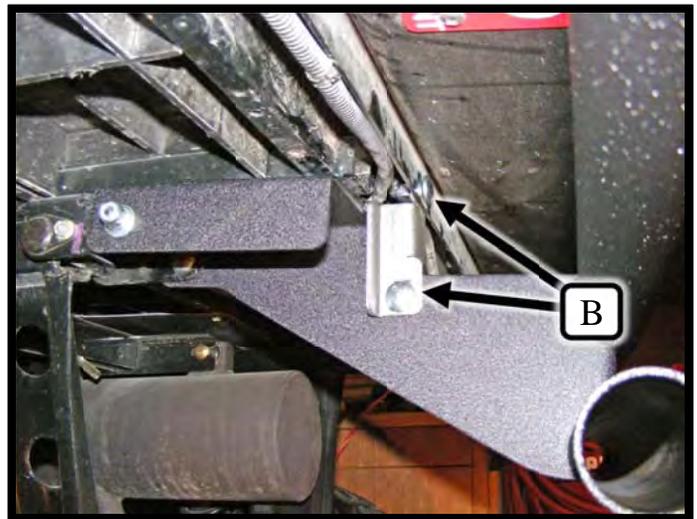


Figure 2

4. Figure out height adjustment for tailgate. Tighten all nuts.

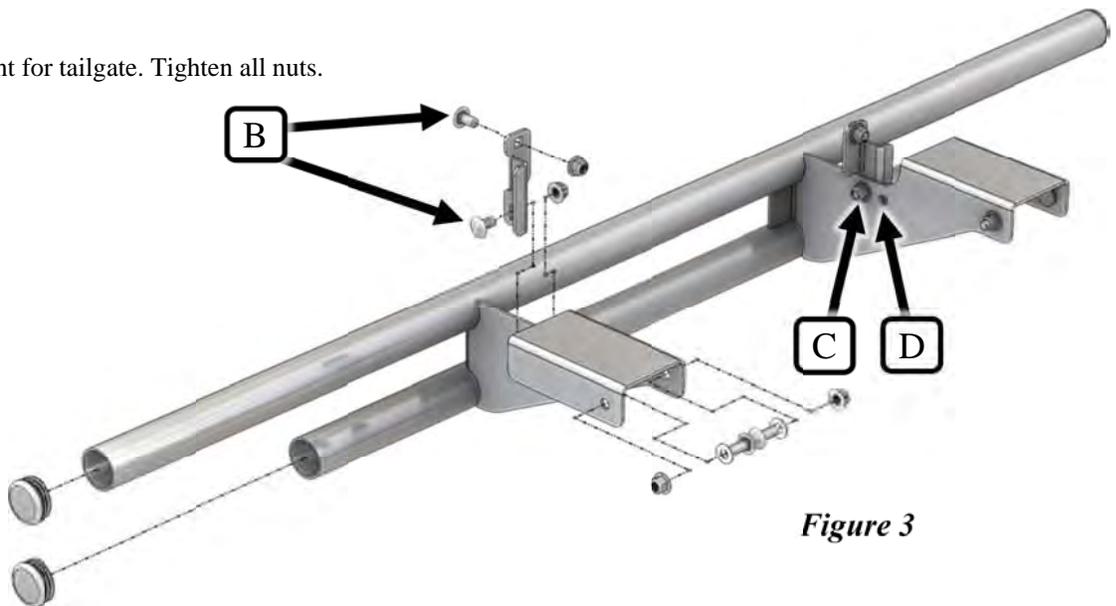


Figure 3