


POLARIS RANGER XP 1000 UPPER RECEIVER

Front Receiver

PART #101780

Kit Components:		
Item #	Qty.	Description
1	1	Upper Receiver
2	2	Upper Receiver Clamp
3	1	HK-362
3.1	4	3/8"-16 x 1.00 Carriage Bolt
3.2	2	3/8"-16 x 1.25 Hex Flange Bolt
3.3	6	3/8"-16 Hex Flange Nylock Nut

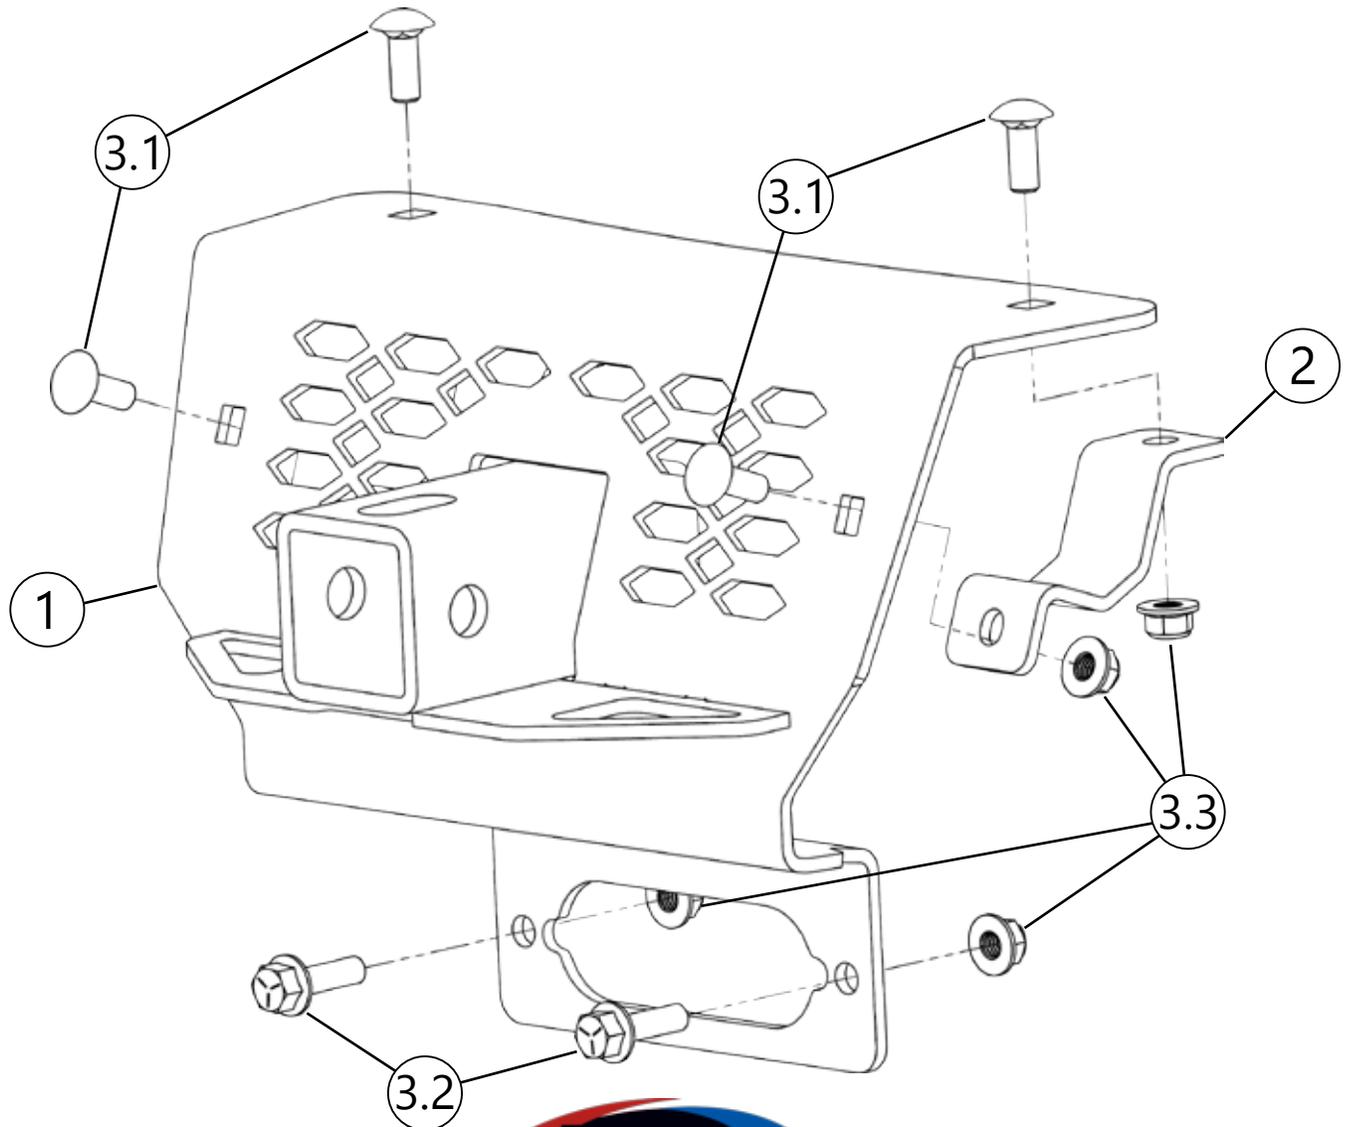

INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. If a winch is already installed on the machine, remove the cable hook and fairlead/hawse and set them aside as they will be re-installed in a later step.
2. Hold Front Upper Receiver (1) in place as shown in **Figure 2**. **Note:** If there is a winch installed on the machine, the winch cable will have to be fed through the fairlead opening on the receiver.
3. Secure Upper Receiver (1) to the top horizontal tube on the front bumper by placing Receiver Clamp (2) over the bumper tube and loosely fastening it to Upper Receiver (1) using 3/8 Carriage Bolt (3.1) and Nut (3.3) as shown in **Figure 1**. (Passenger side shown) Repeat step 3 for driver side.
4. Secure the bottom of Upper Receiver (1) to the fairlead opening in the OEM front bumper using 3/8 Bolts (3.2) and Nuts (3.3) as shown in **Figure 2**.
5. If a winch is installed on the machine, place the fairlead/hawse over the fairlead opening in the Upper Receiver (1) and fasten using Bolts (3.2) and Nuts (3.3) and re-install the cable hook.

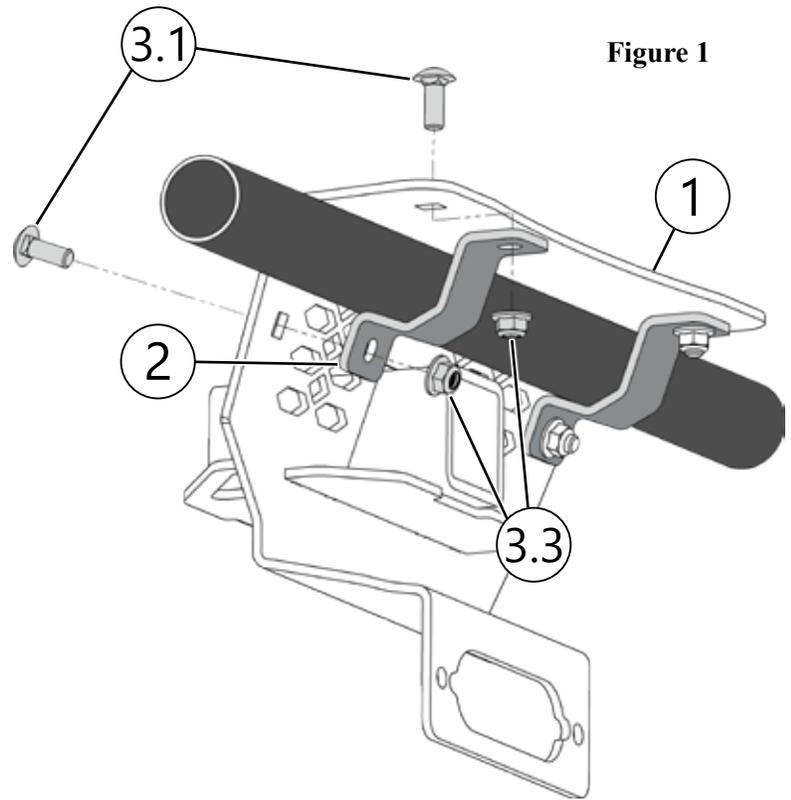


Figure 1

6. Tighten all hardware evenly.

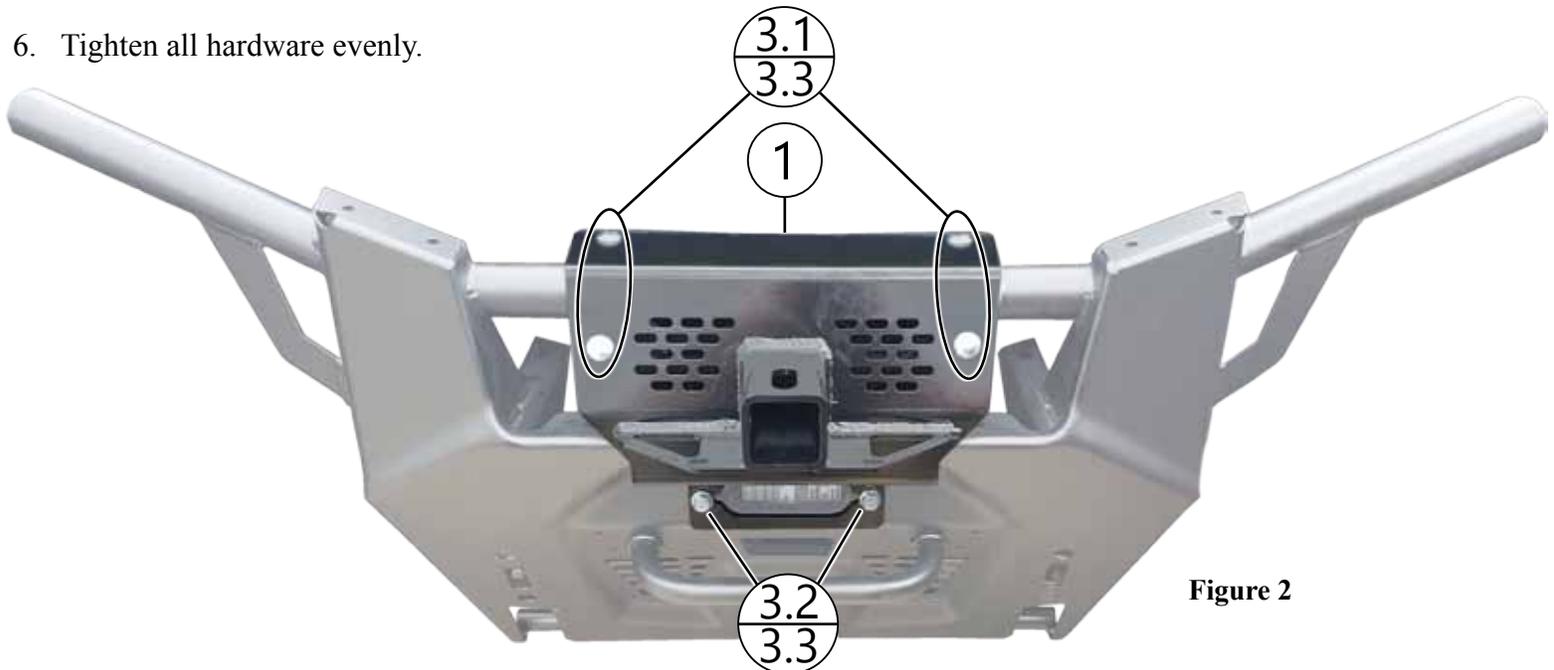


Figure 2