

# Kawasaki 650-750 Brute Force/Prairie Straight Axle Rear End

**Plow Mount**

**PART # 105070**

**Hardware Kit: HK-112**

**Kit Components:**

<u>Qty.</u>	<u>Part Description</u>
1.....	Plow Mount Plate
4.....	5/16"-18 x 1-3/8" x 2" U-Bolt
8.....	5/16-18 Hex Flange Lock Nut

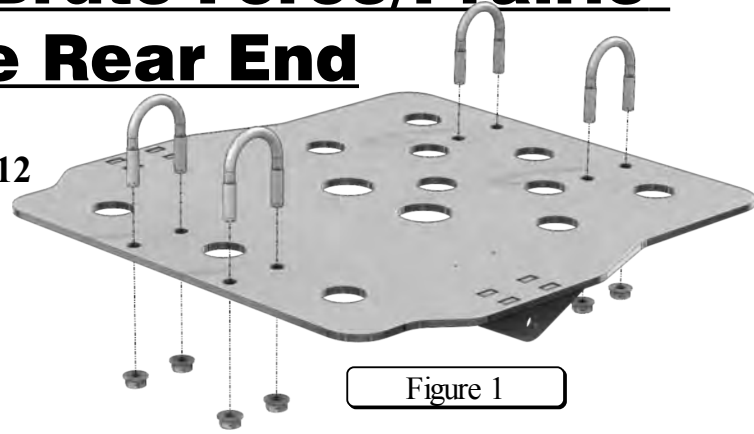


Figure 1

**INSTALLATION INSTRUCTIONS:**

1. Remove 4 bolts (A) holding the skid plate and remove skid plate. (Figure 2)

*Note: If you prefer to leave your skid plate attached you may drill holes for u-bolts and continue to step 2.*

2. Place u-bolts (B) on machine frame as shown in Figure 3.
3. Install mount plate loosely to frame using the u-bolts and 5/16" flanged lock nuts. (Figure 4,5)
4. Adjust plate so oil plug lines up with hole and plate is centered on machine.
5. Tighten down all nuts. (Make sure u-bolt ends are even.)
6. See ATV Plow Tube System instruction manual for tube attachment.

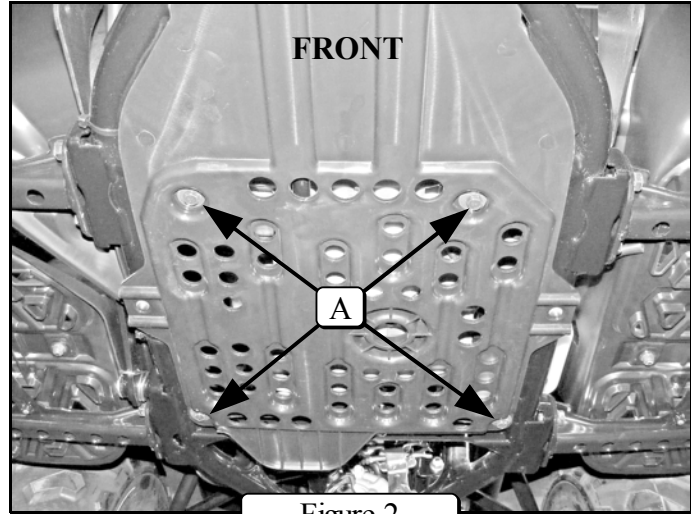


Figure 2

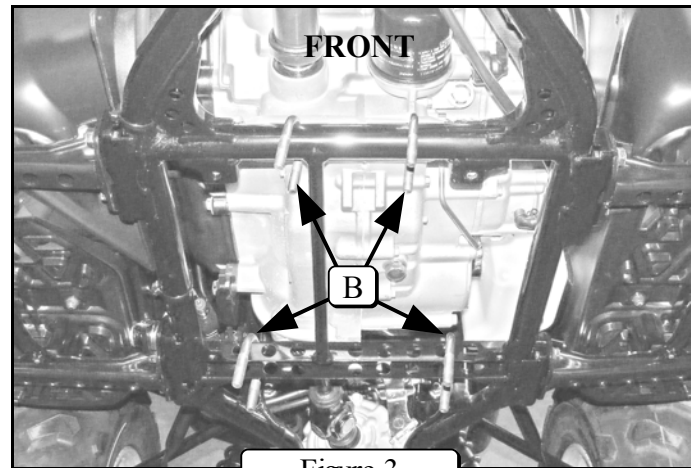


Figure 3

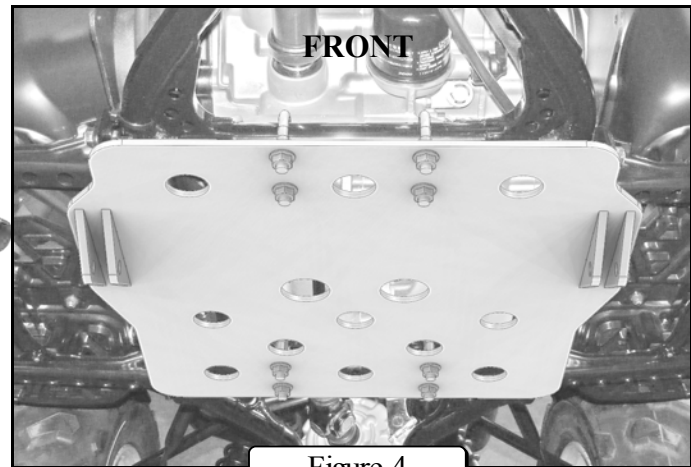


Figure 4

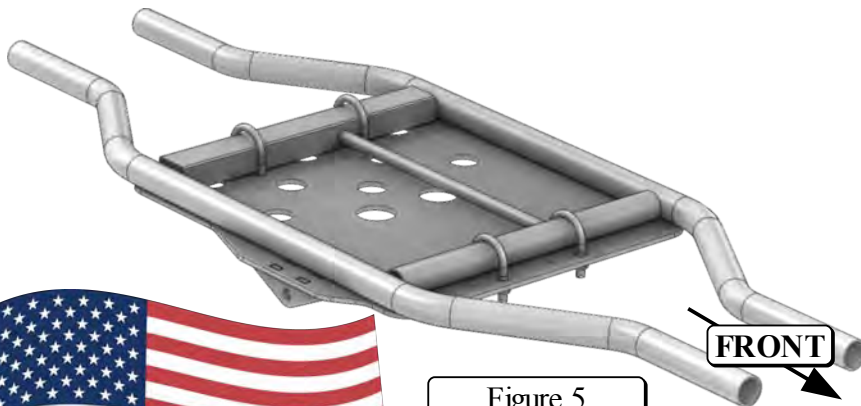


Figure 5

