

# CAN-AM MAVERICK

## PLOW MOUNT

Plow Mount                      PART # 105690  
 Hardware Kit: HK-160

**Kit Components:**

Qty.	Part Description
1.....	Plow Mount Plate
2.....	Mount Brackets
2.....	5/16-18 X 1 1/4" X 2 1/4" U Bolt
6.....	5/16-18 X 1-1/4" Hex Flange Bolt
10.....	5/16-18 Hex Flange Nylok Nut

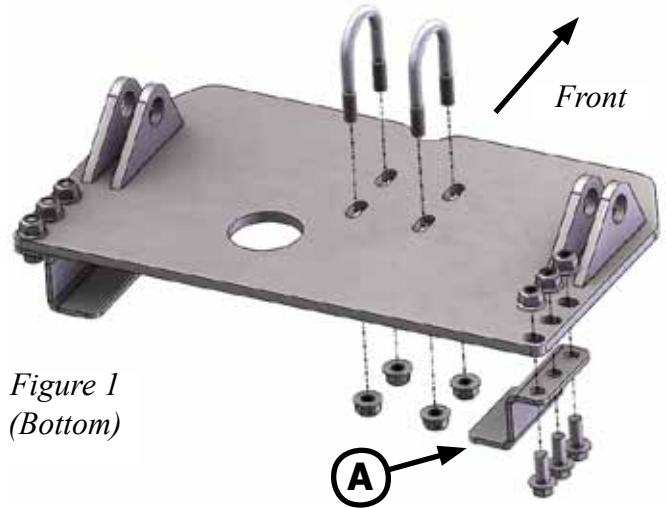


Figure 1  
(Bottom)

### INSTALLATION INSTRUCTIONS:

1. *Note: On some of the pictures shown, the stock skid plate has been removed from the machine for clarity on the installation.*
2. Take the two mounting brackets (A) and attach them to the sides of the plow mount hooking them over the frame loosely. Shown in Figure 2.
3. Slide the mount along the frame up to the front plastic cover where the dashed lines are. Shown in Figure 3. Mark the skid plate using the back two holes on the mount as a template.
4. Remove the brackets and mount from the frame.
5. Locate and remove the two bolts and two screws. Shown in Figure 4. Take off the two front plastic covers (B).
6. With the front of your skid plate free, pull down and drill out the two holes you marked using a 1/2" bit. Shown in Figure 3.
7. Place the two U-Bolts (C) over the frame and into your holes on the skid plate, underneath the front differential. Shown in Figure 5.
8. Reattach the skid plate and front plastic covers (B). Shown in Figures 3 & 4, so that U-Bolts are hanging out the bottom.



Figure 2

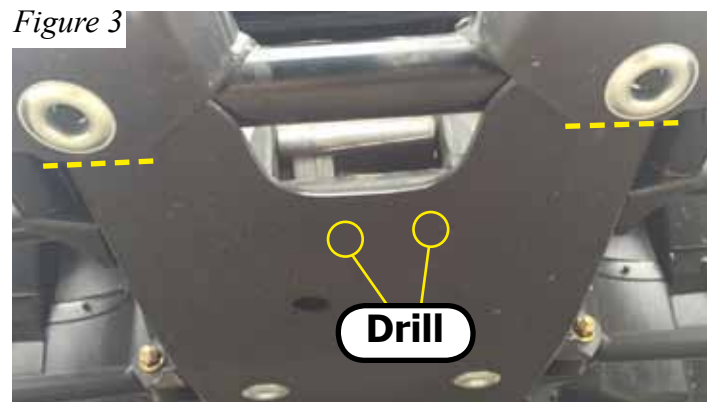


Figure 3

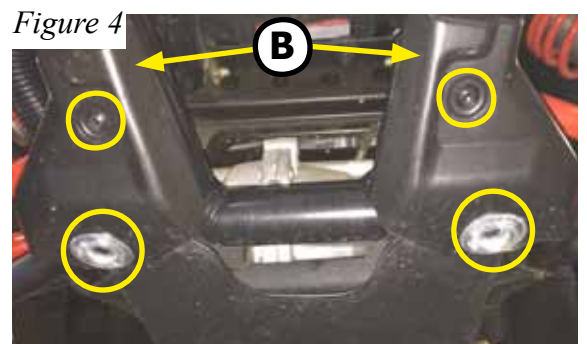


Figure 4

9. Attach the mount plate to the U-Bolts with the hardware provided. Shown in Figure 6. (**DO NOT TIGHTEN AT THIS TIME**).
10. Attach the two mount brackets (A) back onto the mount hooking onto the frame shown in Figures 2&5.
11. Once everything is straight tighten down your brackets and U-Bolts evenly.

## Front Differential

