


# Replacement Poly Face Sheet

PART # 105858-R

## Kit Components:

Item #	Qty.	Description
1	1	Poly Face Sheet
2	2	Replacement Decal

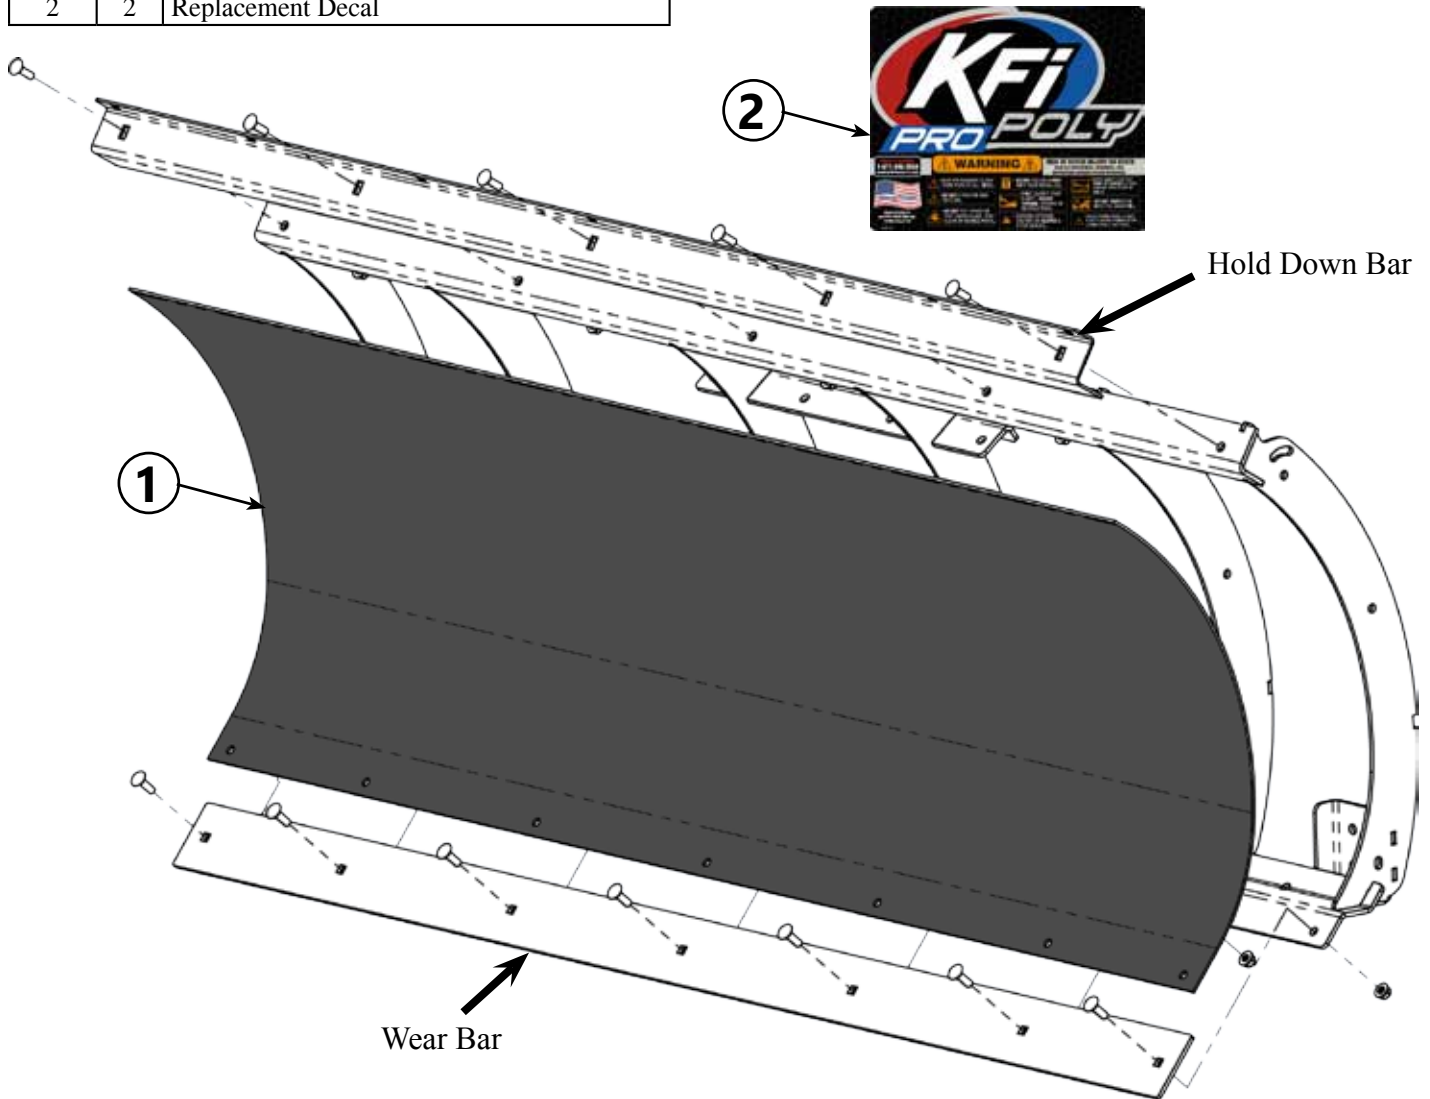

## Installation:

1. Remove bottom wear bar and hardware.
2. Remove old Poly Face Sheet
3. Slide new Face sheet into upper Hold Down Bar with the textured surface facing your ATV/UTV (you may need to loosen hold down bar hardware if the bar is too tight of a fit)
4. Place some sort of weight into the middle of the face sheet to allow the face sheet to curve and take shape of the plow frame.
5. Replace the wear bar and hardware from Step 1.
6. Confirm all wear bar and hold down bar hardware is tight
7. Install replacement Decal to back LH area, similar to original sheet.

