

# PLOW CURB GUARDS


Plow Accessory

PART #106155

## Kit Components:

Item #	Qty.	Description
1	1	Curb Guard Driver Side
2	1	Curb Guard Passenger Side
3	4	5/16" - 18 x 1.25" Carriage Bolt
4	4	5/16" - 18 Hex Flange Nylock Nut

Figure 1

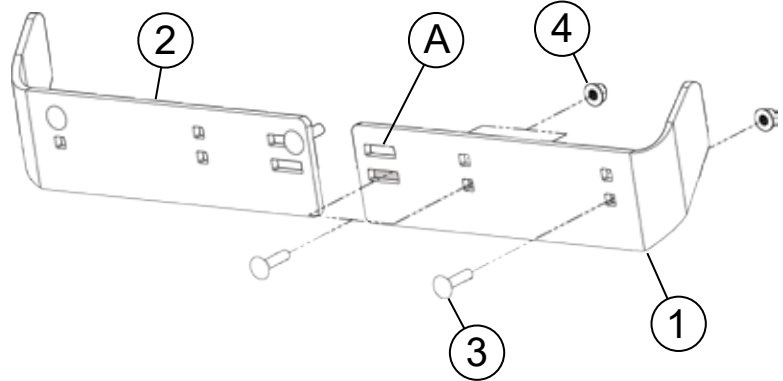

## INSTALLATION INSTRUCTIONS

**Note:** Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Remove and discard the two outermost bolts from the wear bar of the blade.
2. Set curb guard (1) in place (driver side shown) and secure using bolts (3) and nuts (4) as shown in **Figure 2**. **Note:** For first time use, use configuration as shown in **Figure 1**. After replacing or flipping a used wear bar, use hole configuration (A) as shown in **Figure 1**.
3. Repeat step 2 for passenger side and curb guard (2).
4. Tighten all hardware evenly.

Figure 2

