


ALTERNATE WINCH WIRING DIAGRAM

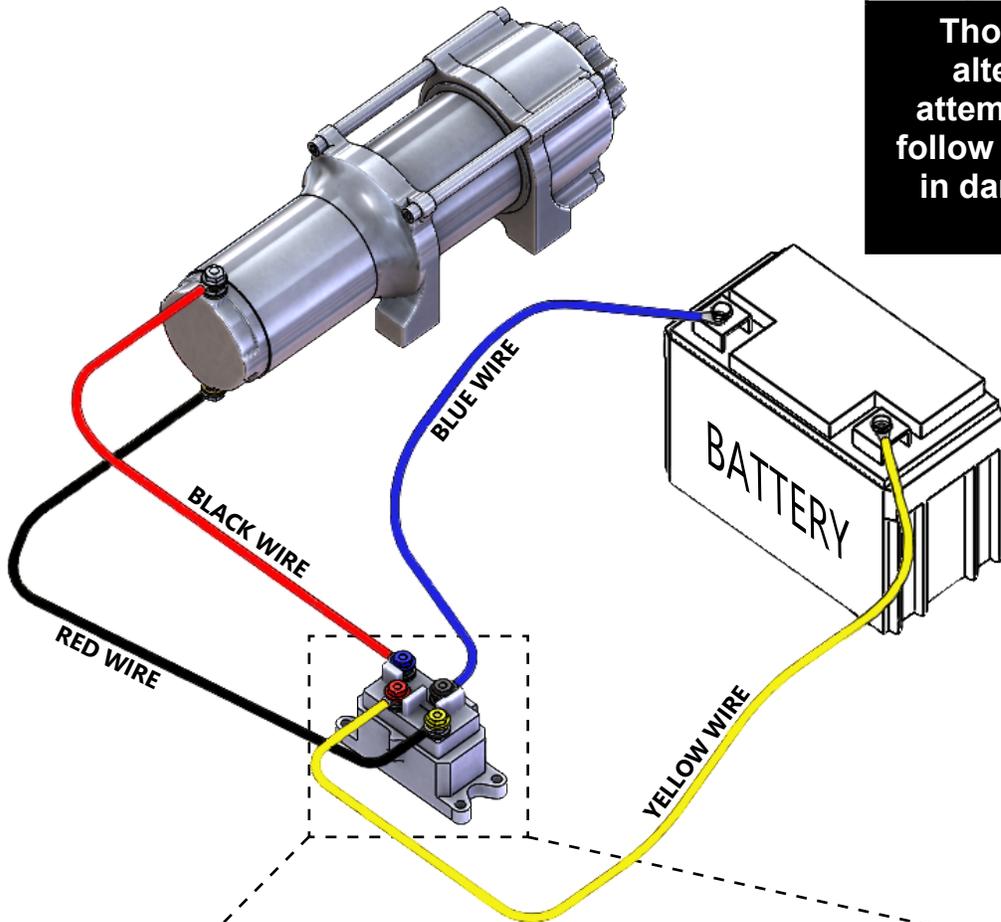


WARNING

Thoroughly read and understand alternate wiring diagram before attempting to start wiring. Failure to follow the wiring directions may result in damage to your wiring system or equipment.



- For use with ATV/UTV applications where the contactor cannot be located close to the vehicles battery
- Run shortest wires, usually red and black, from the contactor to the winch. Run the longest wires, usually blue and yellow, from the contactor to the battery.
- Do NOT color code the wires to the contactor. Contactor terminals RED (+) and BLACK (-) MUST be wired to the battery.

CONTACTOR

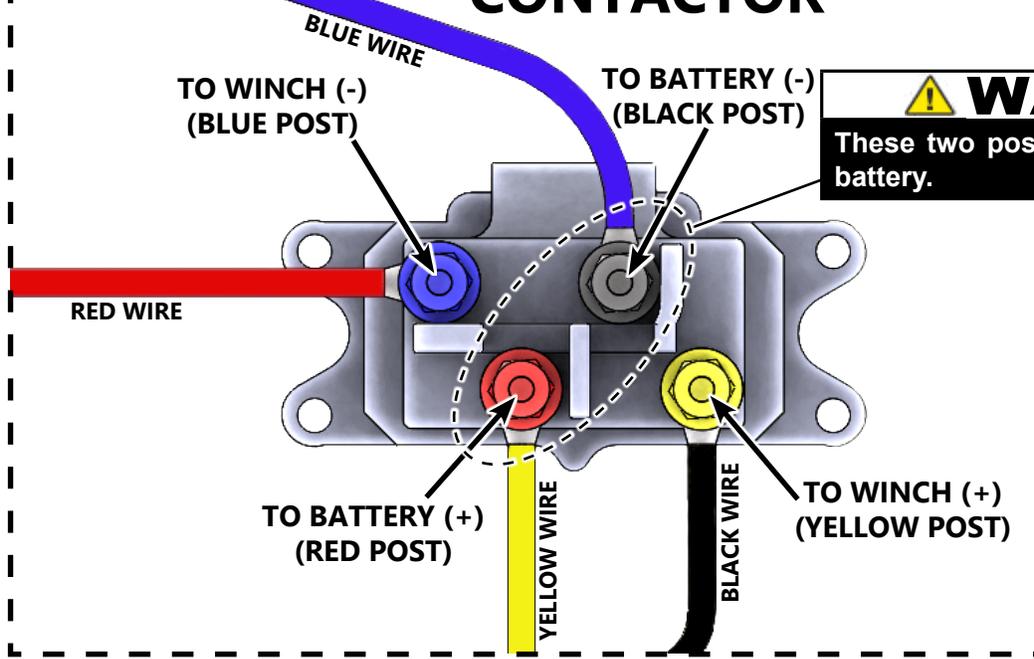

WARNING

These two posts MUST be wired to the battery.

- WIRE WINCH NEGATIVE (BLACK WIRE) TO --> YELLOW CONTACTOR POST
- WIRE WINCH POSITIVE (RED WIRE) TO --> BLUE CONTACTOR POST
- WIRE BATTERY NEGATIVE (BLUE WIRE) TO --> BLACK CONTACTOR POST
- WIRE BATTERY POSITIVE (YELLOW WIRE) TO --> RED CONTACTOR POST