<u>Kawasaki Mule 600/610</u>

1...... 5/16"-18 x 1.00" Flat Head Screw 7...... 5/16" Nylock Nuts 7...... 5/16" SAE Flat Washers

1..... HK-031 Rocker Hardware Kit

<u>4-HOLE MOUNTED WINCH</u> INSTALLATION INSTRUCTIONS:

- 1. Remove the hardware that secures the front plastic bumper cover and remove the bumper cover. *"Figure 1"*
- 2. Place your winch inside the frame of the UTV as shown in *Figure 2*.
- 3. Place the mount into location as shown in *Figure 3* and loosely attach the supplied U-bolts.
- 4. Attach the top of your winch to the mount and UTV by running the hardware thru the bumper frame holes, the mount plate and into your winch *"Figure 3 and 4"*.
- 5. Attach the bottom of your winch to the mount by running the hardware thru your fairlead, the mount plate and into your winch *"Figure 4"*.
- 6. Using the instructions with your Winch, Wire accordingly.
- 7. Re-install your bumper cover from step 1.

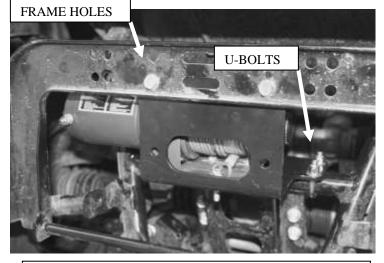


Figure 3 Place Mount Into Location and Attach (2 Hole Winch Shown)

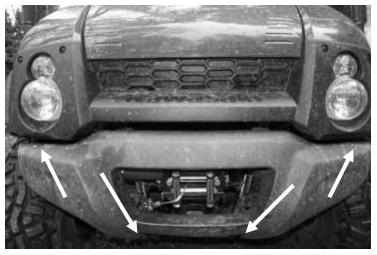


Figure 1 Remove Plastic Bumper Cover

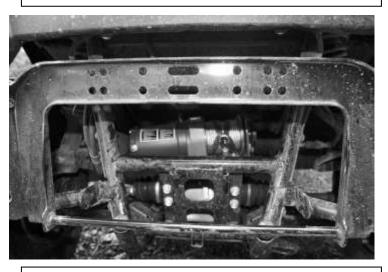


Figure 2 Place Winch Inside The UTV Frame

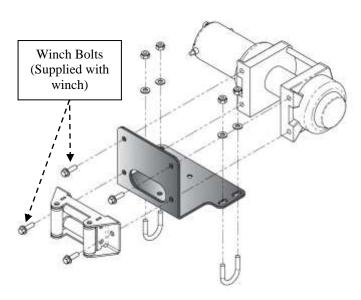


Figure 4 Assemble Winch to Mount

1

2-HOLE MOUNTED WINCH INSTALLATION INSTRUCTIONS:

- 1. Remove the hardware that secures the front plastic bumper cover and remove the bumper cover. *"Figure 1"*
- 2. Assemble your fairlead to the mount plate using the hardware that was supplied with you fairlead. *"Figure 5"*
- 3. Assemble your winch to the mounting plate using our supplied Flat Head Screw in the counter sunk hole and the hardware supplied with your winch in the other bolting location. *"Figure 5"*
- 4. Place your Winch Assembly into location and mount to your UTV using the supplied 5/16" hardware as shown. *"Figures 3 and 5"*
- 5. Using the instructions with your Winch, Wire accordingly
- 6. Re-install your bumper cover from step 1.

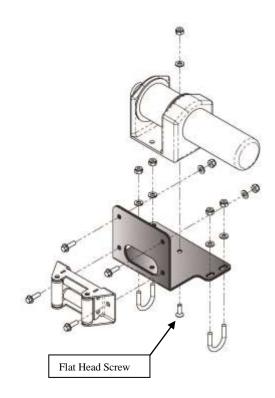



Figure 5 Assemble Winch to the Mount

Mini-Rocker Switch Hardware Kit

This allows you to mount your usual handle bar mounted switch to almost any desired location.

- a. Remove handlebar mount hardware from the switch.
- b. Locate desired mounting location
- c. Mark and drill two switch holes through dash using switch housing as a template
- d. Drill a 3^{rd} hole for the switch wiring.
- e. Assemble per Figure 6



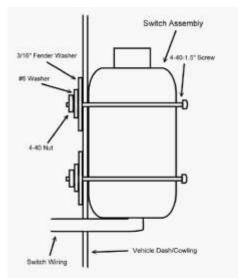

Optional Switch Mount Instructions*

"Figure 6" Mini-Rocker Mounting