# **Yamaha Grizzly 600 Winch Mount**


## Winch Mount PART # 100580 Kit Components:


#### 

### **INSTALLATION INSTRUCTIONS:**


- 1. Remove the (4) bolts "A" and remove the skid pan "Figure 1".
- 2. If you have a 1998 model...Remove the bottom two fasteners that attach to the radiator. This will allow movement of the radiator and allow you to slip the mount into position.
- 3. Place the mounting plate into position and bolt back two long tabs to your ATV using the supplied hex head hardware. There may be a space between the mounting plate and the tubes. Use the supplied spacer washers if needed. Do not tighten at this time "Figure 2"
- 4. If you have the 1998 model, you can now replace the two fasteners that where removed in Step 2.
- 5. Assemble your winch and fairlead to the mounting plate with the hardware that was supplied with your winch kit. (Note: If you are installing a Warn 3.0 you may need to rotate the motor leads. Please see motor rotation Instructions on the back of these instructions)
- 6. Place the Skid pan back into position. The skid pan should fit behind the front two tabs on the mounting plate. Re-assemble the (4) bolts that were removed in Step1 and replace the top (2) with the supplied Cap screws and lock washers.
- 7. At this time you can tighten all hardware.
- 8. Using the instructions provided with your winch, wire accordingly.



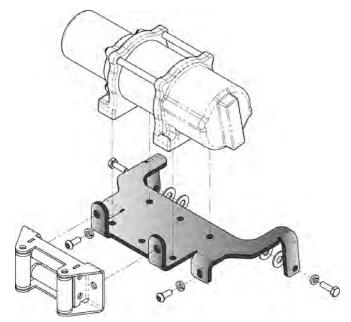

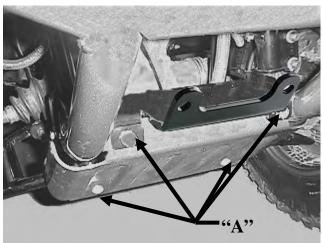

"Figure 1"

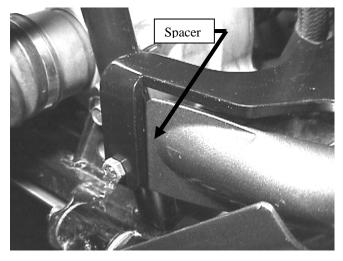

"Figure 2"



# WINCH MOTOR ROTATION INSTRUCTIONS (3.0ci WINCH ONLY)

- Tape the motor end cap to the motor housing as seen in Figure 1. Caution: The motor end cap must NOT be removed from the motor housing, damage may occur to the winch motor.
- 2. Using a 3/8" box end wrench, disengage the two motor end bolts from the winch Drum Support. It is not necessary to remove the two motor end bolts from the motor housing.
- 3. Using a 3/16" allen wrench, remove the three screws that hold the winch Motor Collar onto the Drum Support.

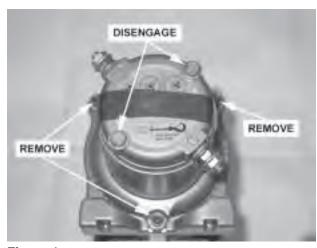


Figure 1

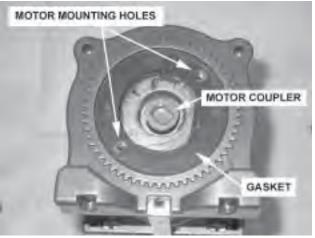


Figure 2

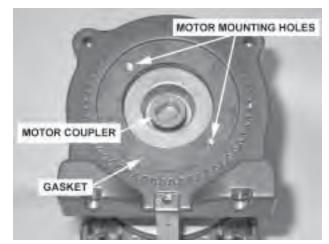


Figure 3

- 4. Lift motor assembly off Drum Support. Rotate the gasket and Motor Coupler 90 degrees, see **Figure 2 and Figure 3**.
- Reattach the winch collar and motor assembly back onto the winch Drum Support. The motor should now be rotated 90 degrees. Tighten all fasteners to 5 ft lbs at this time.



Figure 4

WARN® INDUSTRIES 65094 REV A0