

POLARIS RZR 900/ 1000

FRONT TOW HOOK

Tailgate Bracket PART # 101270
 HK-345

Kit Components:

Item #	Qty.	Description
1	2	TOW HOOK
2	5	5/16"-18 X 1" CARRIAGE BOLT
3	5	5/16"-18 HEX FLANGE NYLOK NUT

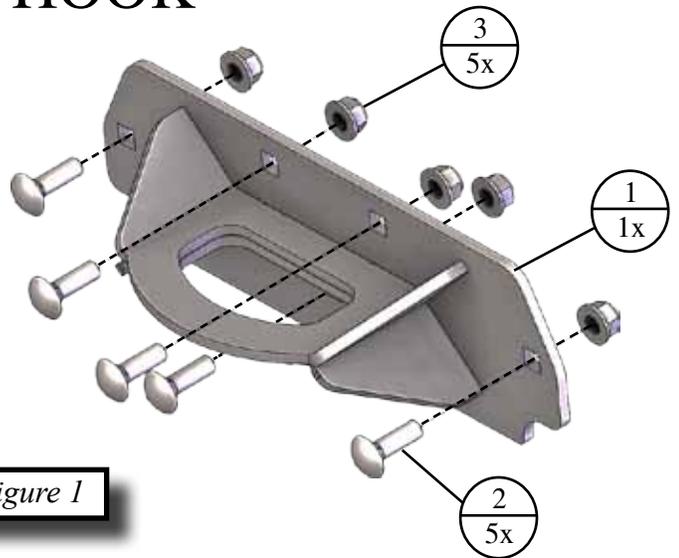


Figure 1

INSTALLATION INSTRUCTIONS:

Note: Make sure all of the hardware needed to complete this mount is in the package. Read through and understand the instructions before installing.

- Place tow hook on front of machine, insert five carriage bolts (2) through plate and the Machine. Loosely thread hex flange nuts (3) on to bolts as shown in *Figure 2*. Once all hardware has been installed, tighten all hardware evenly.

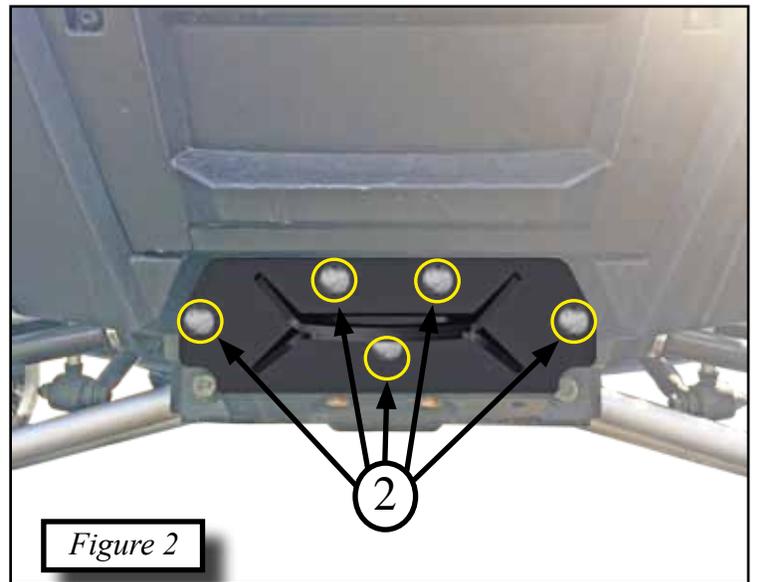


Figure 2

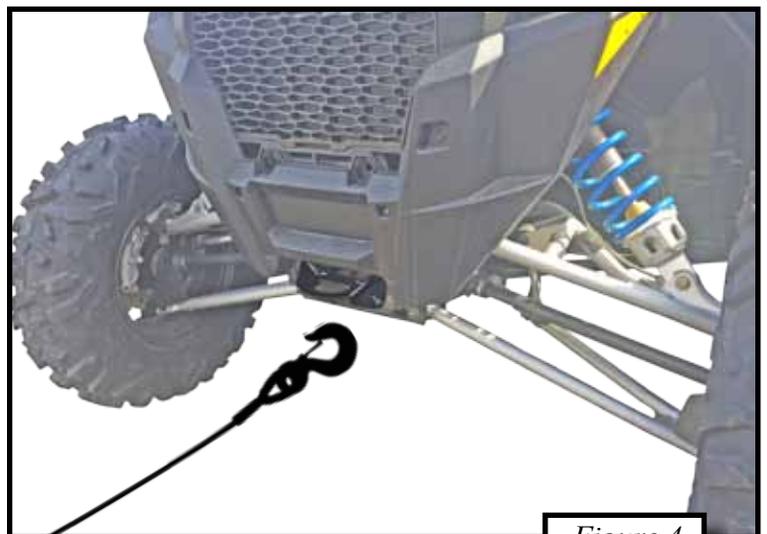


Figure 4