

CF-Moto CForce 400S

Winch Mount


Winch Mount

PART # 101355

Hardware Kit: HK-326

Kit Components:

Item #	Qty.	Description
1	1	Winch Mount
2	1	Winch Fairlead Plate
3	4	3/8-16 X 1" Short Neck Carriage Bolt
4	4	3/8-16 Hex Flange Nylock Nut
5	2	5/16"-18 X 1-1/4" Hex Flange Bolt
6	2	5/16"-18 Hex Flange Nylock Nut

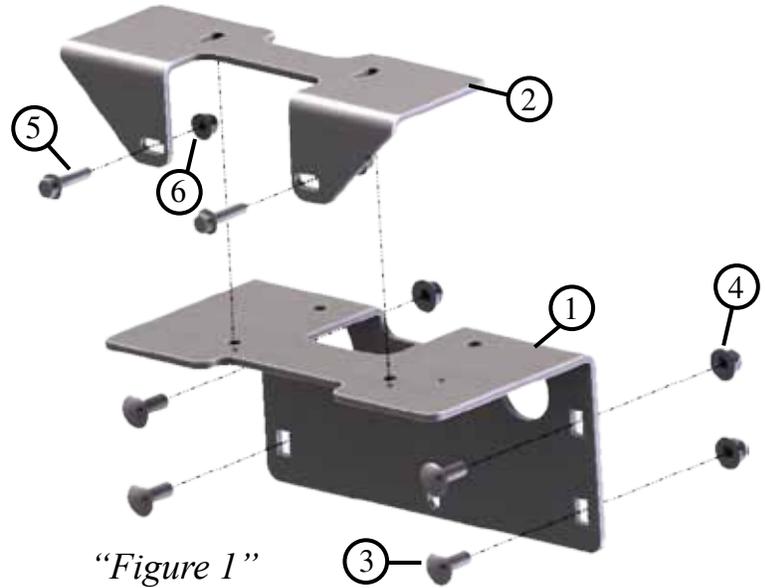

"Figure 1"


INSTALLATION INSTRUCTIONS:

Note: Make sure all of the hardware needed to complete this mount are in the package. Depending on your winch you may have extra hardware left over when finished installing. Read through and understand the instructions before installing.


1. Remove the (4) bolts from the front plastic fascia. Shown in [Figure 2](#).
2. Set winch mount plate (1) and winch (A) upside down in the opening behind the front frame tubes. Shown in [Figure 3](#).
3. Attach mount plate (1) loosely to the back of the frame using the four carriage bolts (3) into the stock hole location. Shown in [Figure 4](#).



"Figure 2"

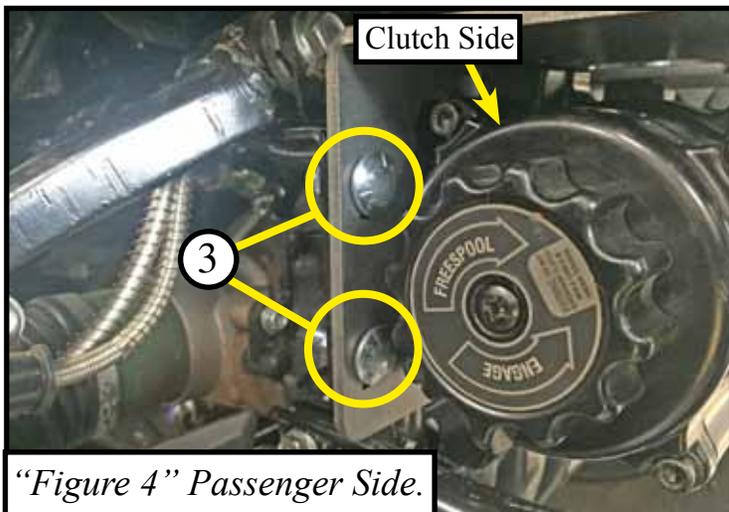





"Figure 4" Passenger Side.

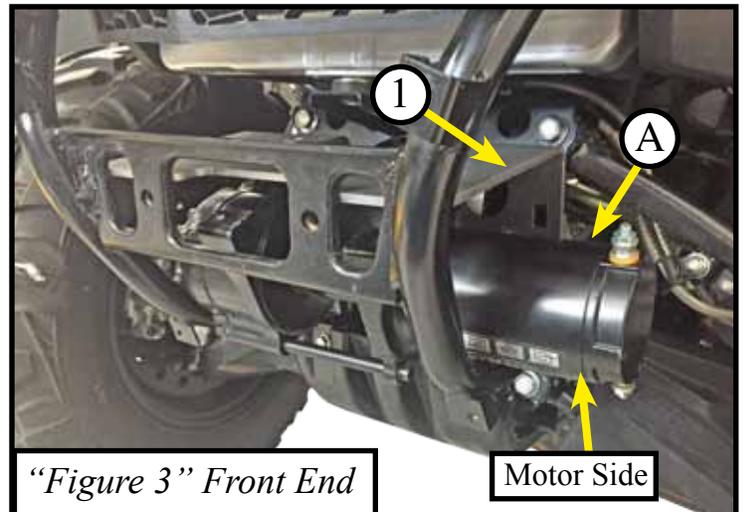

"Figure 3" Front End

Motor Side

4. Attach the rear holes of the winch to the winch mount (1) loosely using the hardware (B) provided with your winch. Shown in [Figure 5](#).
5. Set winch fairlead plate (2) into the in the opening behind the front frame tubes over top of the winch mount plate. Shown in [Figure 6](#).
6. Attach the front holes of the winch through the two plates loosely using the hardware provided with your winch. Shown in [Figure 7](#).
7. Bolt the roller fairlead to the front factory fairlead location on the frame. By inserting the supplied 5/16 bolts (5) through the fairlead rollers into the threaded frame holes and out the mounting holes. Attach the 5/16 flange nut (6) to the bolts loosely. Shown in [Figures 7 & 8](#).
8. Tighten the rear frame bolts (3) as shown in figure 4, and front fairlead bolts (5) shown in figure 7. Next tighten winch bolts on the top of the mount.

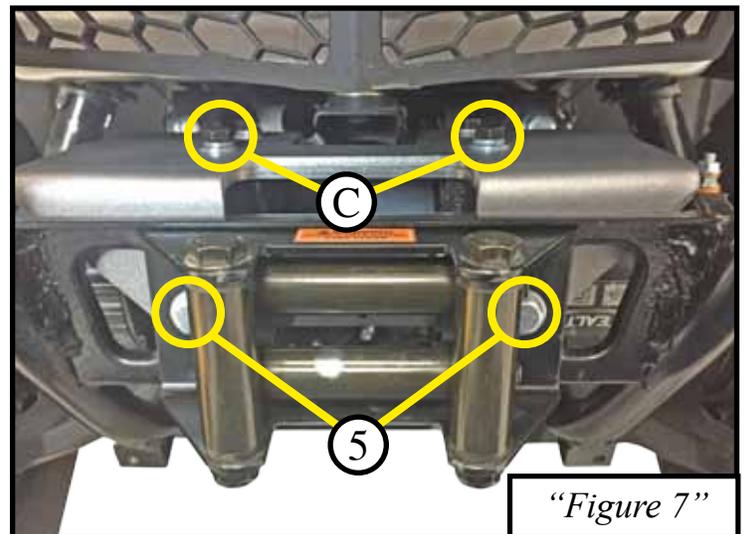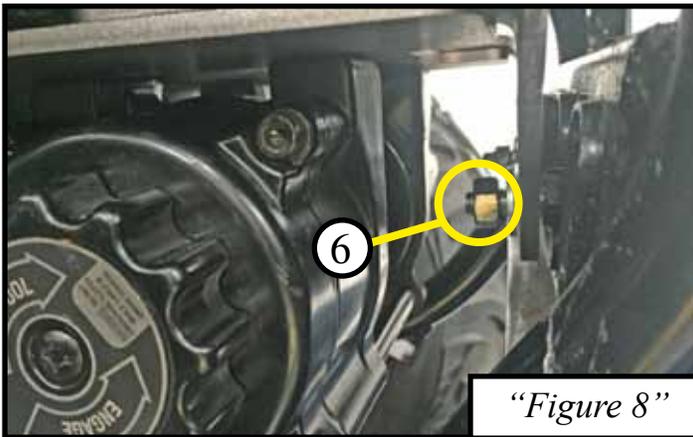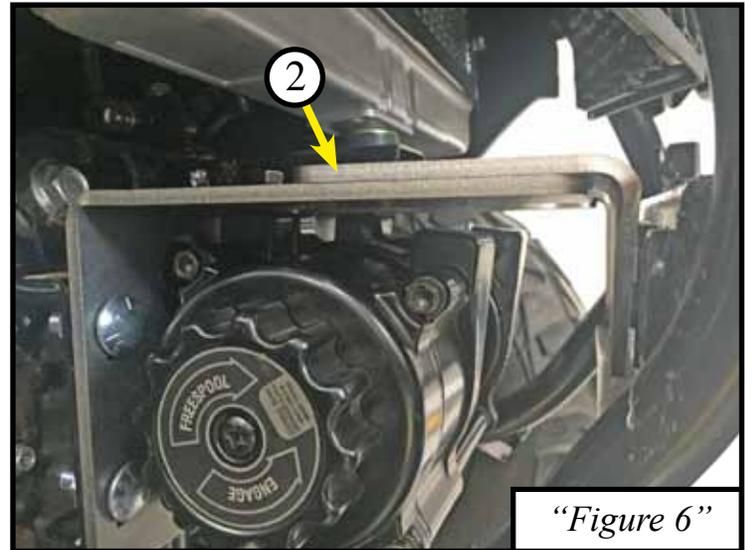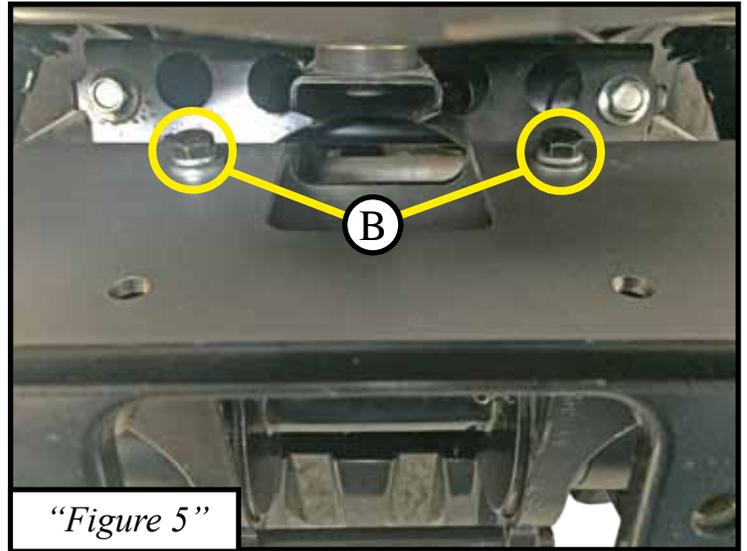

WIRING INFORMATION

1. The battery location is under the seat.
2. We recommend mounting the contactor next to the battery under the seat.
3. Use the wiring diagram in your winch manual to see how the winch and controllers are wired.
4. Wire the red ignition wires from controllers to the red (+)

