

TEXTRON WILDCAT XX


WINCH MOUNT

Winch Mount

PART # 101655

Kit Components:

Item #	Qty.	Description
1	1	WINCH MOUNT
2	1	SKID PLATE
3	1	SUPPORT
4	1	RH WING
5	1	LH WING
6	1	CONTACTOR BRACKET
7	1	HK-031
8	1	HK-351
8.1	4	M12-1.25 X 20 HEX FLANGE BOLT
8.2	15	5/16"-18 X 1.00 CARRIAGE BOLT
8.3	15	5/16"-18 HEX NUT FLANGE NYLOCK
8.4	2	1/4" FLAT WASHER
9	1	HK-314

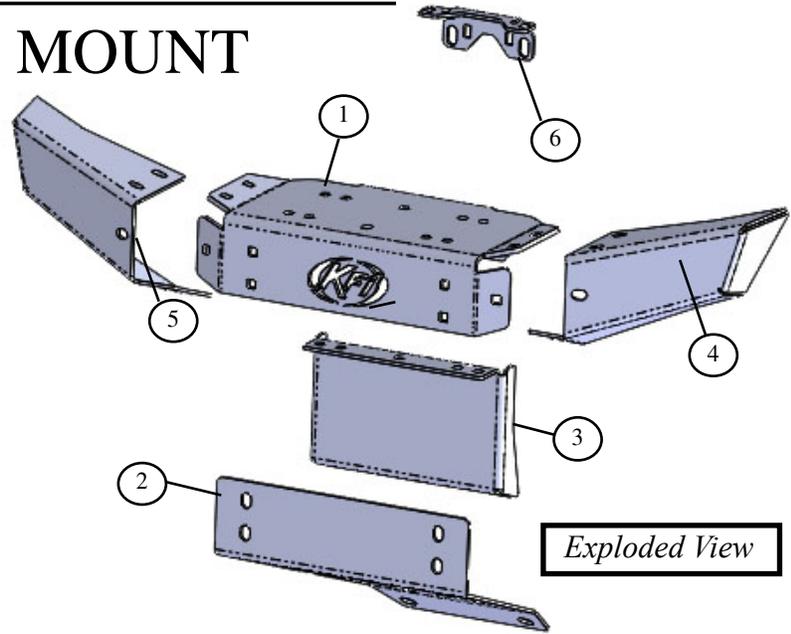

INSTALLATION INSTRUCTIONS:

Note: Make sure all of the hardware needed to complete this mount is in the package. Read through and understand the instructions before installing.

1. Remove the front plastic fascia (A) from your machine shown in Figures 1 & 2. Set plastic and hardware aside for later.
2. Loosely install winch mount (1) using two M12 bolts (8.1) (use existing threaded holes in your machine) as shown in Figure 3

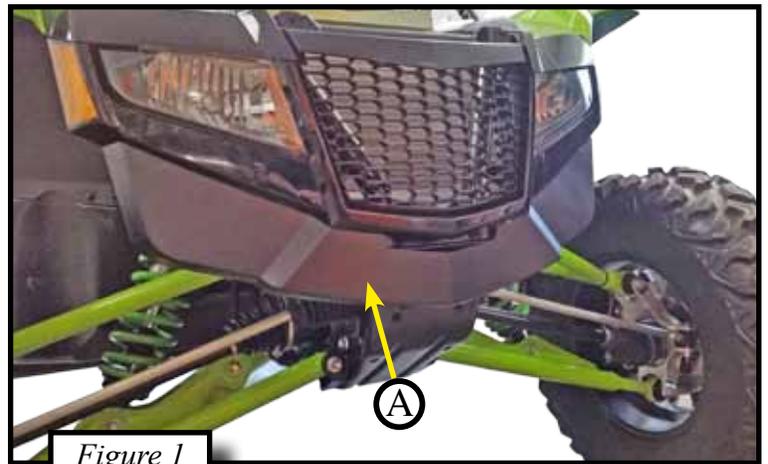


Figure 1

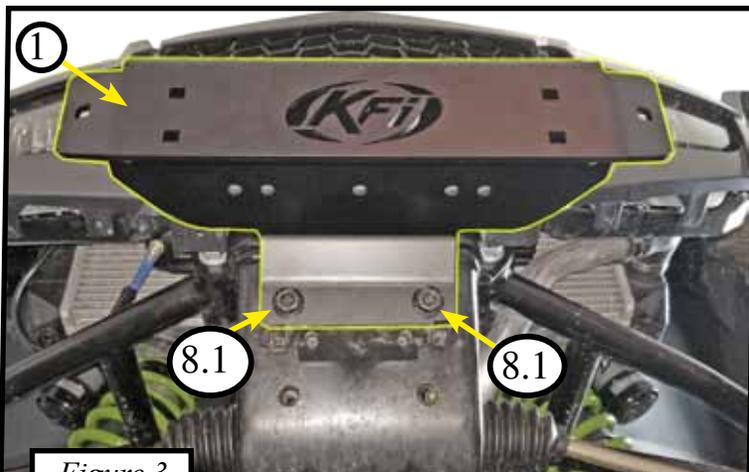


Figure 3

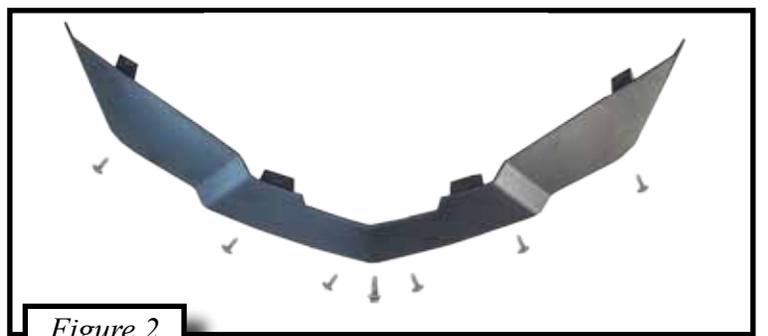


Figure 2

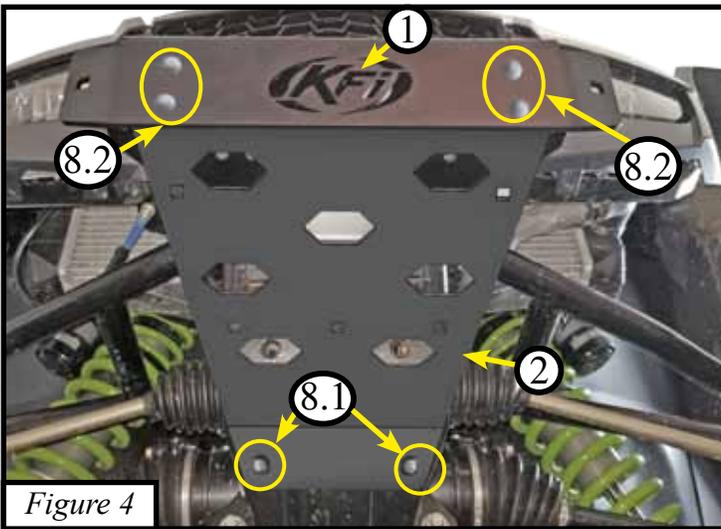


Figure 4

- Next install skid plate (2) using two M12 bolts (8.1) (use existing threaded holes in your machine) and using four 5/16" bolts and nuts (8.2 & 8.3) as shown in [Figure 4](#). Tighten all hardware evenly.

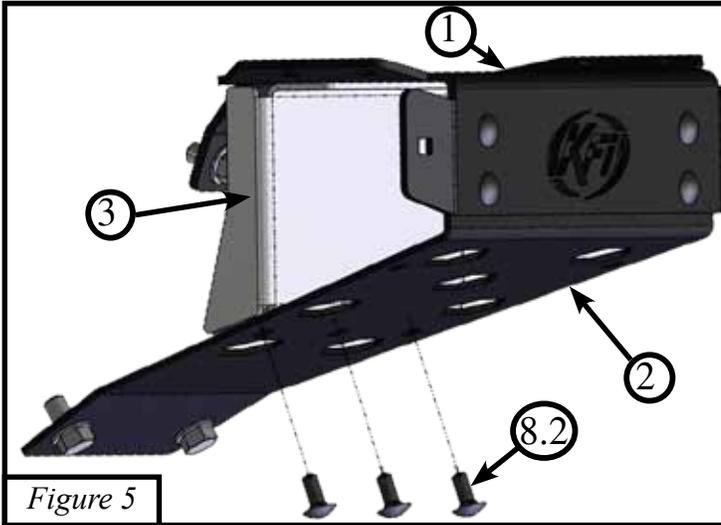


Figure 5

- Reinstall front plastic fascia (A) from Step 1 [Figures 1 & 2](#)
- Next slip the support (3) in front of the plastic fascia (A) and between the winch mount (1) and skid plate (2) and fasten with three 5/16" bolts and nuts (8.2 & 8.3) through the bottom holes as shown in [Figure 5](#)

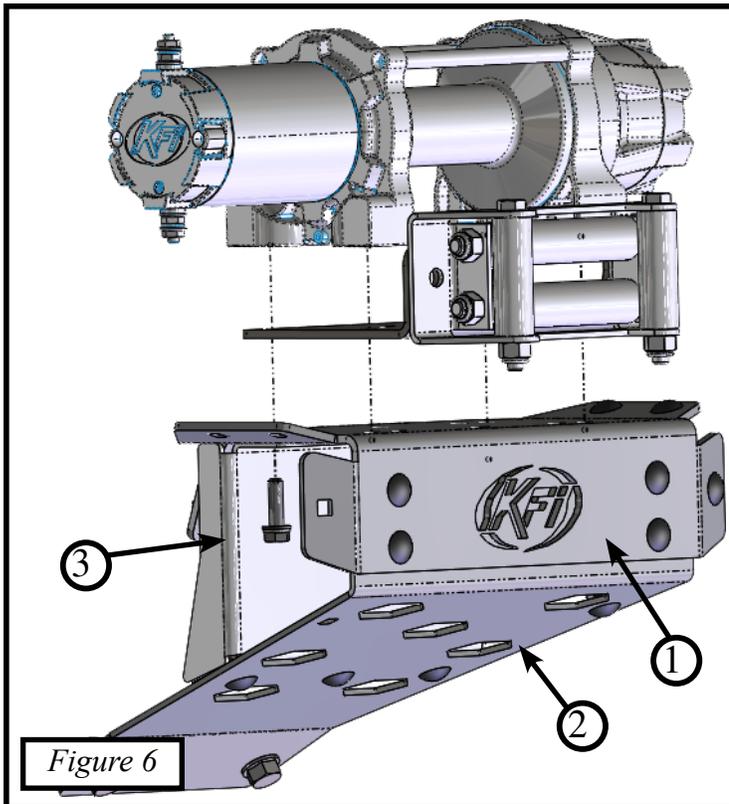


Figure 6

- Install your winch according to your winch manual. Bolt the roller / hawse fairlead to the fairlead mount. *Note: If your winch did not come with a fairlead bracket you will have to purchase separately. You may need to rotate your leads on a wide winch.*
- The bolts will go through the support (3) and winch mount (1) and fairlead mount on the back set of holes only. If your winch did not come with longer M8 bolts use bolts supplied with HK-314. The front bolts will go through the winch mount (1) and fairlead mount [Figure 6](#). Tighten all hardware

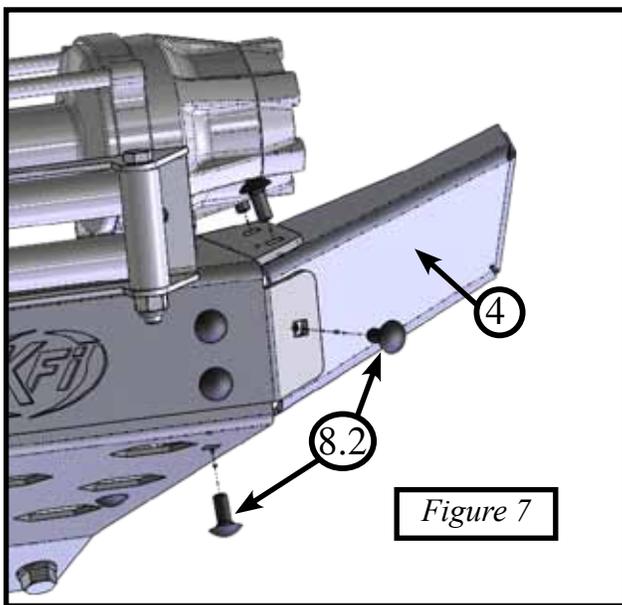


Figure 7

- Next install RH and LH wings using four 5/16" bolts and nuts (8.2 & 8.3) per side. Figures 7 and 8

Winch Wiring

- The contactor location is under the center console next to the battery.
- You need to first remove the drivers seat and then you can remove the center console to gain access to the battery.
- The contactor comes with four bolts to mount up. Attach the contactor to the contactor bracket (6) using two of the mounting bolts. Using the two flat washers (8.4) and remaining contactor hardware attach the bracket to the battery tray. Figures 9, 10, 11
- You will run the longer winch wires up through the center console to the front of the machine shown in Figure 12.
- For more details on wiring the winch see your winch

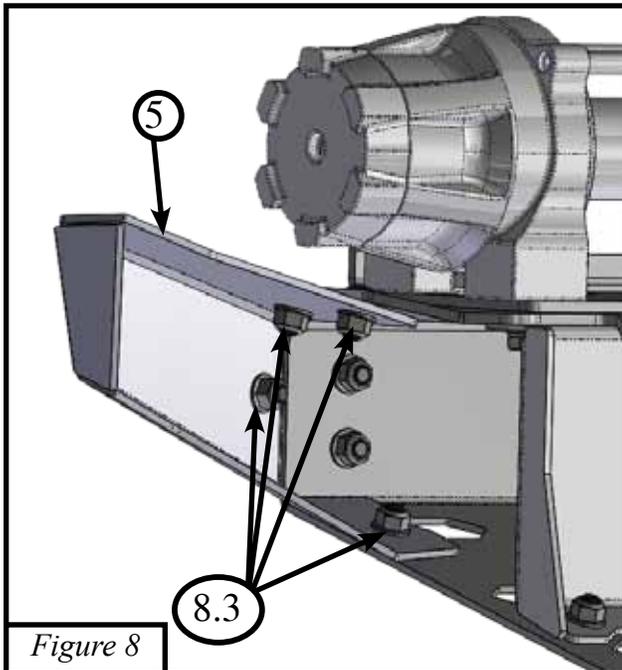


Figure 8

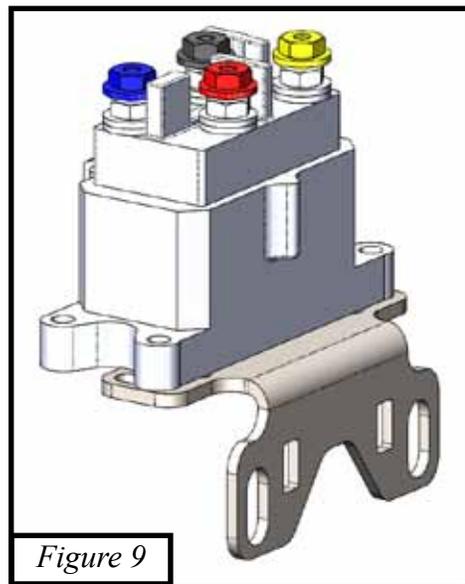


Figure 9

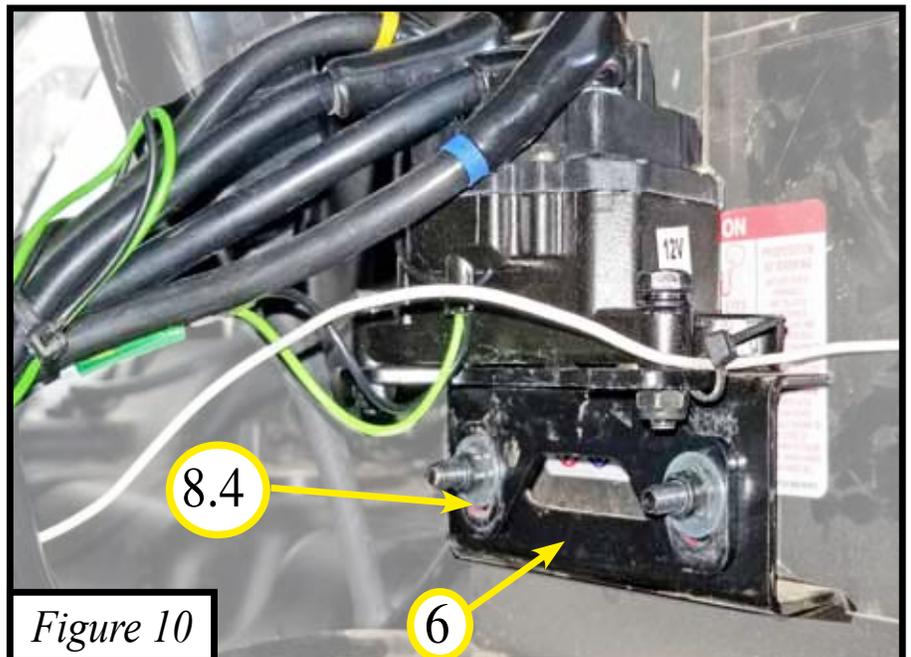


Figure 10

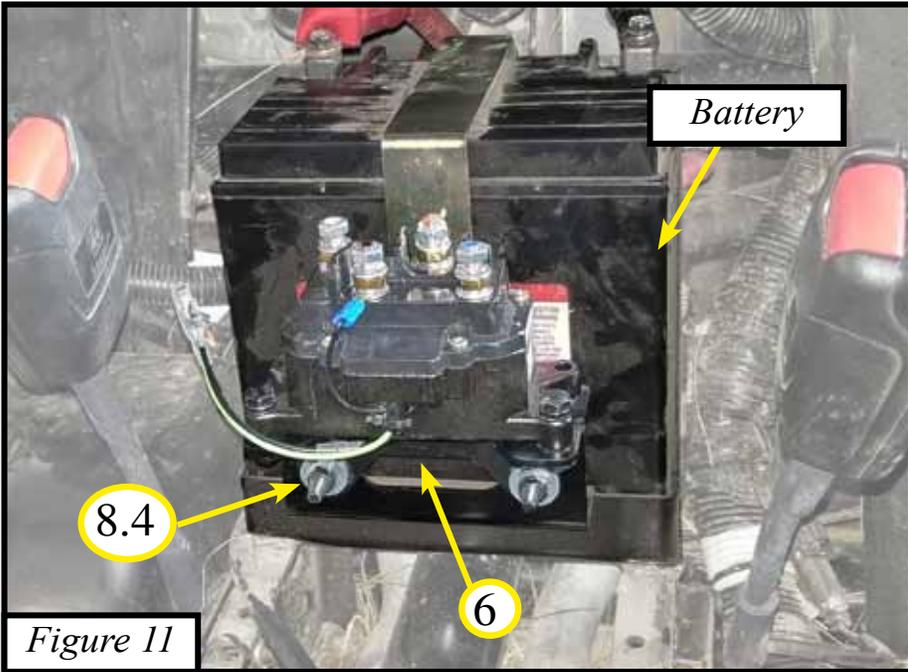


Figure 11

manual.

SWITCH

Use included Mini-Rocker Switch Hardware Kit (HK-031) to fasten a handlebar mounted mini-rocker switch to the dash or any desired location.

- f. Remove handlebar mount hardware from the switch
- g. Locate desired mounting location
- h. Mark & drill 2 switch holes through dash using switch housing as a template

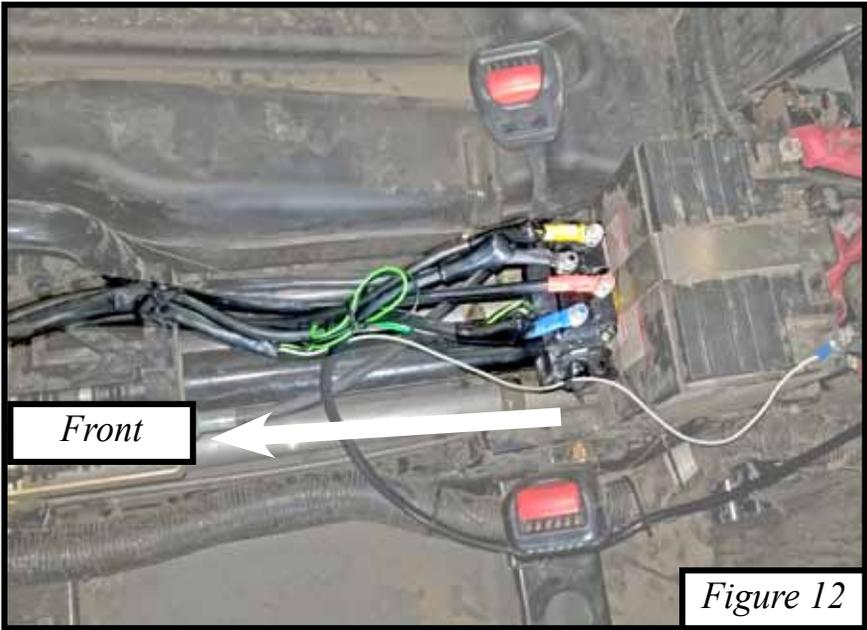


Figure 12

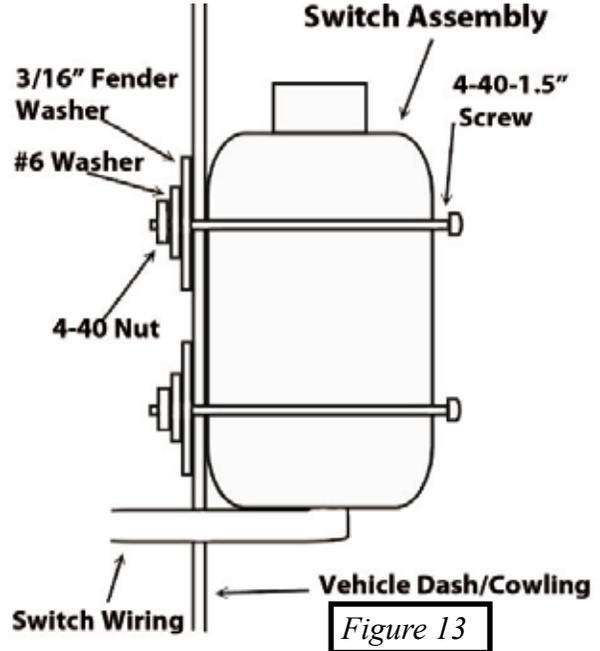


Figure 13

Optional Switch Mount Instructions*

