

Honda Foreman/Rubicon

Plow Mount

PART # 105055

Hardware Kit: HK-110

Kit Components:

<u>Qty.</u>	<u>Part Description</u>
1.....	Plow Mount Plate
2.....	5/16-18 x 1-1/4" x 2" U-Bolt
2.....	5/16-18 x 1-3/8" x 2" U-Bolt
8.....	5/16-18 Hex Flange Lock Nut

INSTALLATION INSTRUCTIONS:

1. Remove 4 frame bolts (A) from middle skid plate as shown in Figure 2.
Note: If you prefer to leave your skid plate attached you may drill holes for u-bolts and continue to step 2.
2. Place smaller u-bolts (B) and larger u-bolts (C) on machine frame as shown in Figure 3.
3. Install mount plate loosely to frame using the u-bolts and 5/16" flanged lock nuts as shown in Figures 4 & 5.
4. Adjust so plate is centered on machine.
5. Tighten down all nuts. (Make sure u-bolt ends are even.)
6. See ATV Plow Tube System instruction manual for tube attachment.

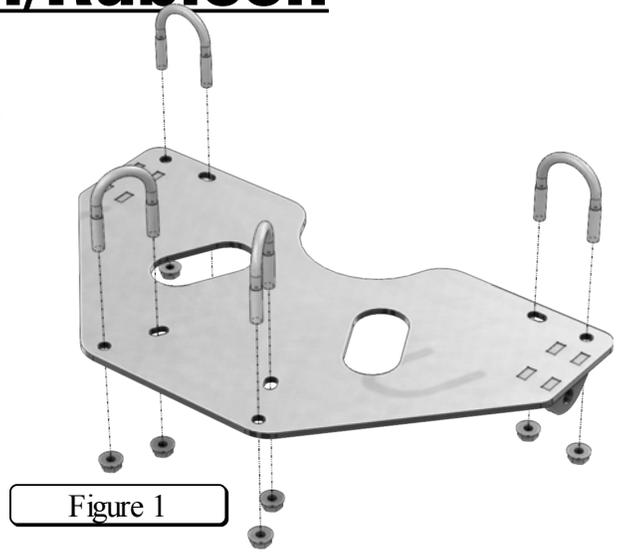


Figure 1

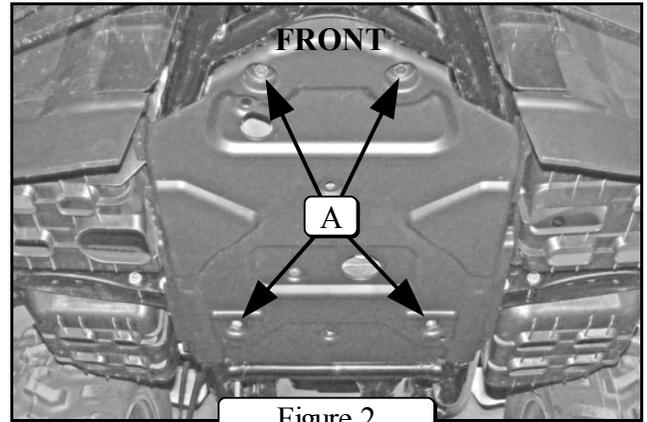


Figure 2

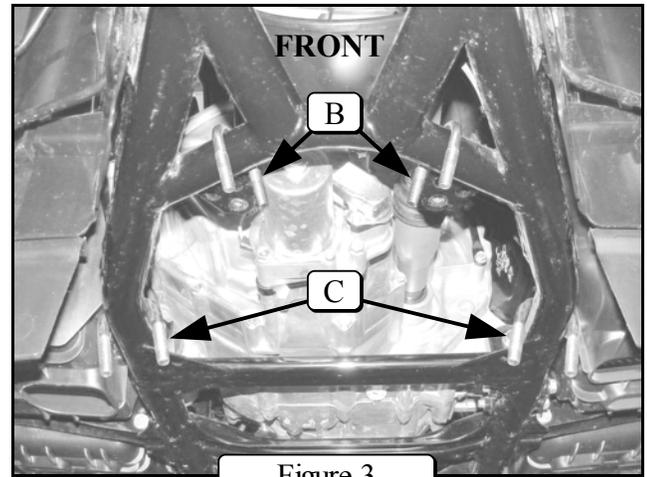


Figure 3

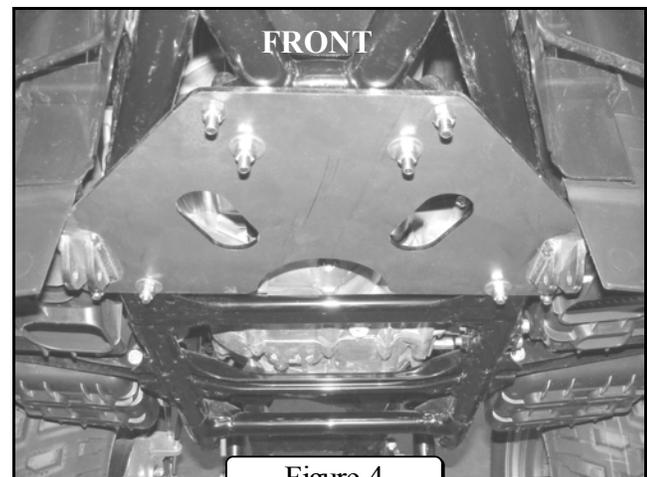


Figure 4

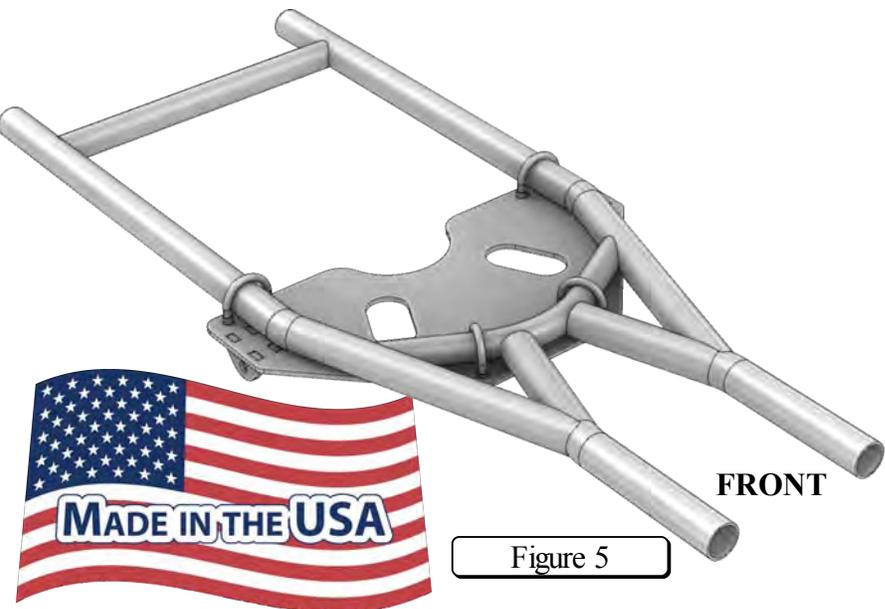


Figure 5

