


HISUN TACTIC/FORGE PLOW MOUNT

Plow Mount PART #106150

| Kit Components: | | |
|-----------------|------|------------------------------------|
| Item # | Qty. | Description |
| 1 | 1 | Plow Mount |
| 2 | 1 | Hardware Kit HK-111 |
| 2.1 | 4 | 5/16"-18 X 2.00 U-Bolt 1.00 Thread |
| 2.2 | 8 | 5/16"-18 Hex Nut Flange Nylock GR5 |

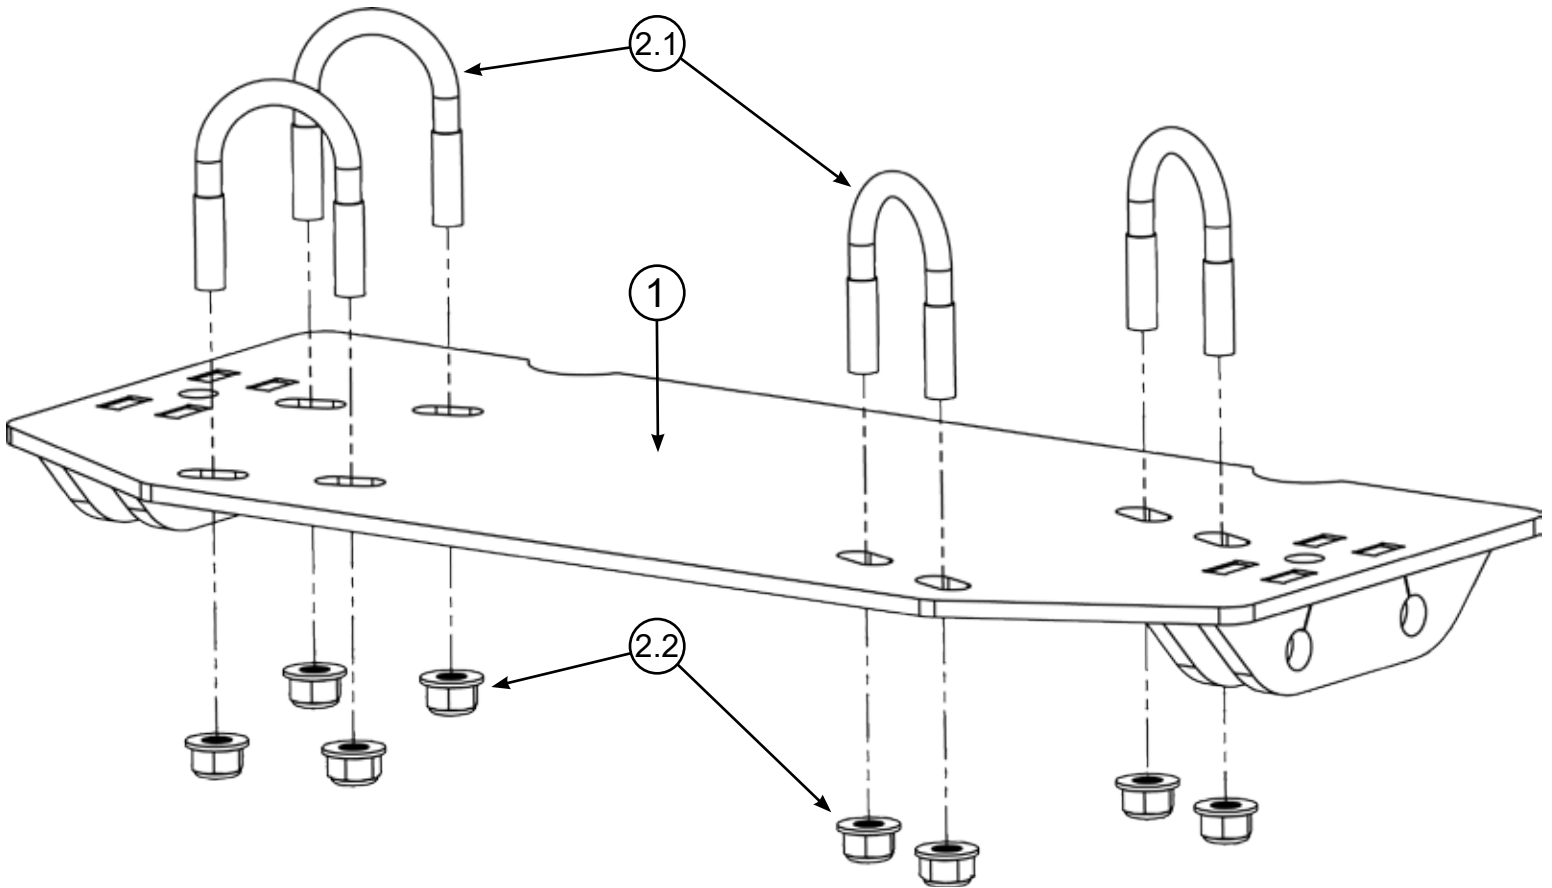

INSTALLATION INSTRUCTIONS

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

1. Remove the 4 bolts (A), shown in Figure 1, that hold the center skid plate in place and remove it from the machine.
2. Place skid plate on the ground and align the 2 arches on the mount with the matching indents on the skid plate (B) as shown in Figure 2.
3. Using the mount as a template, mark the hole locations for the u-bolts through the mount, onto the skid plate. Remove the mount and drill holes for the u-bolts to fit through.

Note: Make sure the holes in the skid plate are large enough so that you don't have issues moving everything into place.

4. Install the skid plate back onto the machine after you have drilled all 8 holes for the u-bolts. (Figure 1, Bolts A)
5. Once the skid plate is bolted back into place, hold the mount in position and get each u-bolt started so it stays on the machine.

Note: Figure 3 (Left Side of Machine) and Figure 4 (Right Side of Machine) are showing the u-bolt locations, the skid plate is not shown for clarity.

6. Once all u-bolts are in place, tighten hardware evenly.

