


CFMOTO UFORCE U10 PRO

Plow Mount

PART #106565

Rev. A

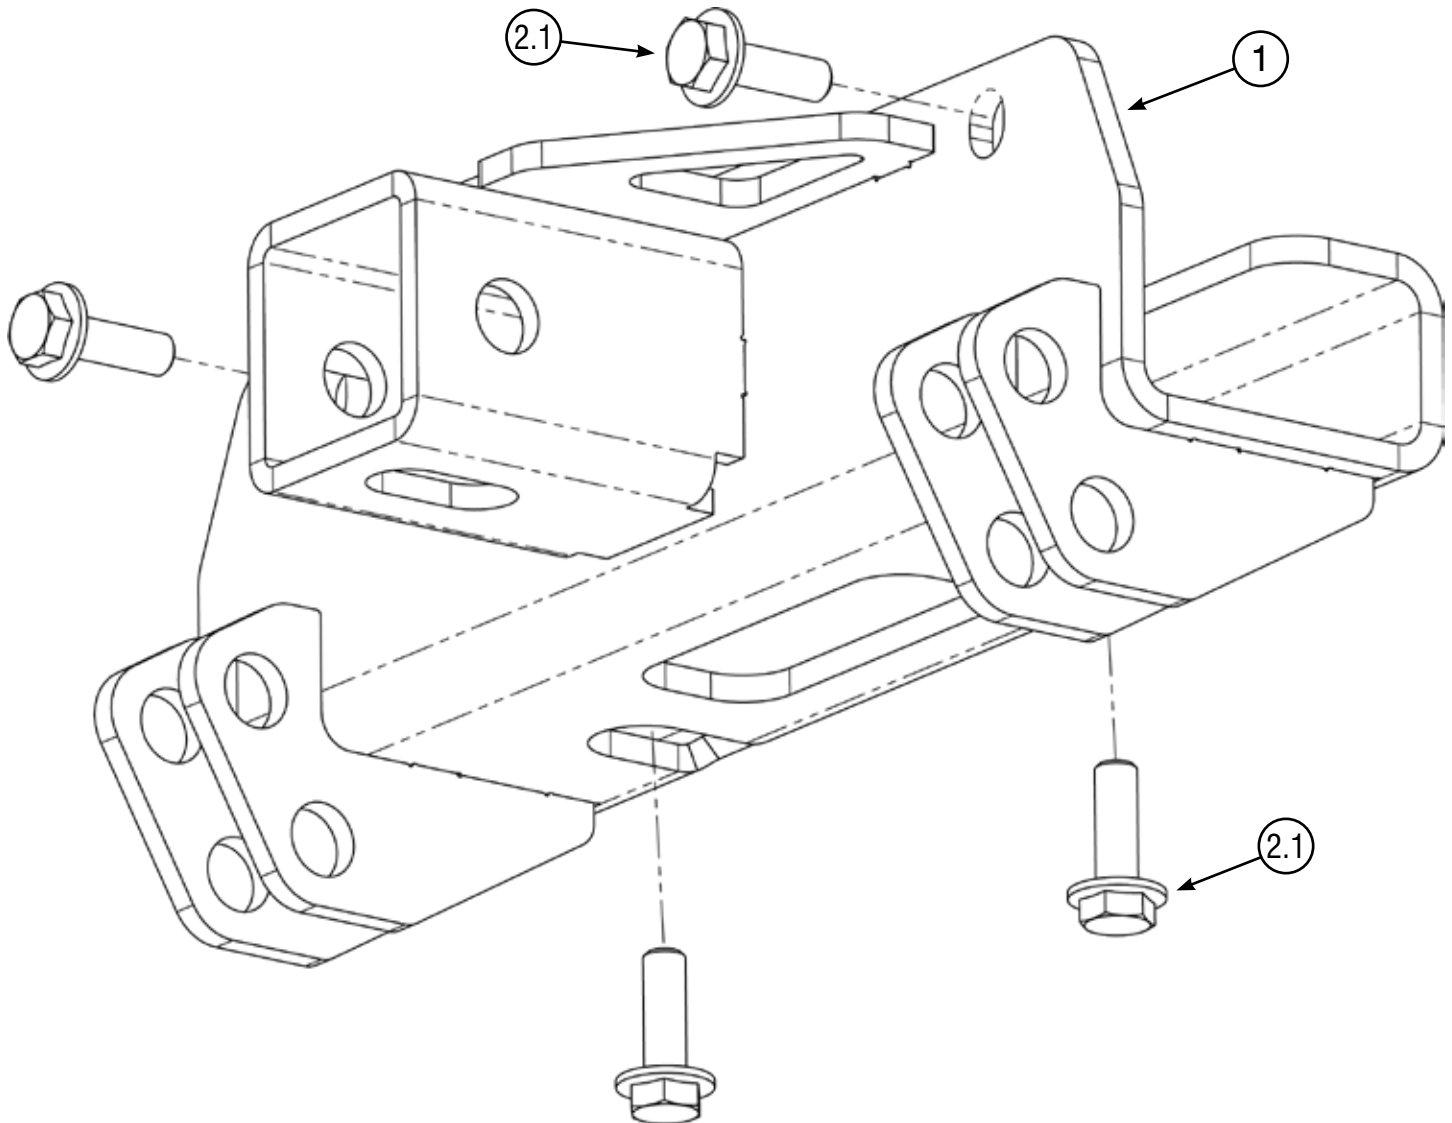

Kit Components:		
Item #	Qty.	Description
1	1	Plow Mount (106651)
2	1	Hardware Kit (HK-350)
2.1	4	M10-1.25 X 30 Hex BOLT FLANGE



INSTALLATION INSTRUCTIONS

Notice

Torque bolts to ANSI Specs (or OEM specs if applicable), unless otherwise stated. After the first use and at the start of each season, check torque.

Note: Make sure all hardware needed to complete this mount is in the package. Thoroughly read through and understand the instructions before installing.

Installation Instructions

1. Locate and remove bolts **(A)** on the lower part of the front bumper. Locate and loosen top bolts **(B)** until the bumper moves freely. Shown in **Figure 1**.
2. Place the Plow Mount **(1)** on the lower part of the front bumper. Using the new included hardware, loosely install bolts **(2.1)** as shown in **Figures 2 and 3**.
3. Loosely install the remaining bolts **(2.1)** through the bottom of the plow mount as seen in **Figures 3 and 4**.
4. Once all hardware is started, tighten all bolts **(2.1)** evenly to 50 ft/lbs. See **Figure 4**.
5. Retighten top bolts **(B)** from Step 1. See **Figure 1**.

