


# Instruction Manual PN: 105915

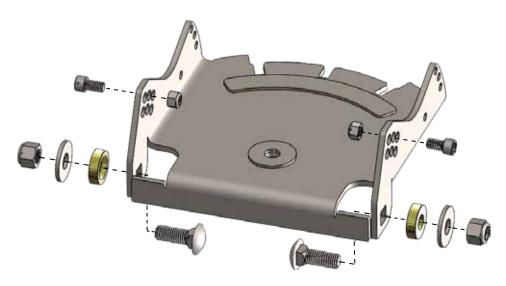

# UTV CC Conversion Plow Cradle

#### **Manual Conventions**

This manual uses the following symbols to help differentiate between different kinds of information. The safety symbol is used with a key word to alert you to potential hazards in operating and owning a plow.

Follow all safety messages to avoid or reduce the risk of serious injury or death.



DANGER indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.

#### **MARNING**

WARNING indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



CAUTION indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury.

#### **CAUTION**

CAUTION used without the safety alert symbol indicates a potentially hazardous situation which, if not avoided, may result in property damage.

#### **NOTE**

If you have questions regarding your plow, we can help. Please call our help line at 1-877-346-2050.

To help you make informed decisions regarding safety, we have included instructions and information on labels. This information is provided with the intent to help avoid potential hazards that may harm you or others. It is, in no way, possible for us to inform you of every hazard you may come across with this product.

### **Safety Rules**

#### **AWARNING**

- Read this manual thoroughly before operating your plow. Failure to follow instructions could result in serious injury or death.
- Do not exceed 5 mph, even with blade raised.
- Make sure that all nuts and bolts are tightened per installation instructions.
- Never operate this KFI product with missing or damaged parts.
- Drive slowly over bumpy and rough terrain, driving fast could cause damage to winch (if applicable) or plow.
- Never raise the plow above point of contact as it could cause damage to machine or winch (if applicable).
- Always perform regular inspections and maintenance on plow tubes and hardware before use.
- Operate with extreme caution on slopes, steep grades, and rough terrain.
- Be aware of any possible hidden objects under the snow.
- Do not ram the blade into the pile.


#### **L**CAUTION

- Take care when installing PLOW SPRINGS as they will be under tension.
- Use care when lifting components into place.




Never stand or ride on the plow.


# **Installation Instructions**

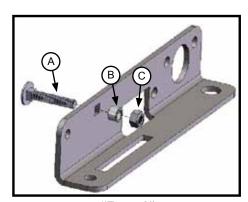

"Figure 1"

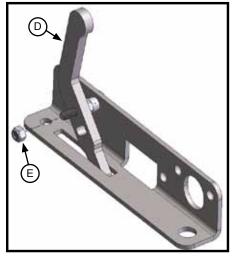

"Figure 2"

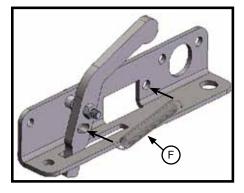

"Figure 3"


NOTE: Some of these parts do not come with the #105915 Kit. We have provided instructions on how to assemble the CC tube bracket if not done prior to installation.

Assemble the lever bracket as shown in Figures 1-5.


- Inserting the carriage bolt (A) attach the spacer (B) and nut (C). Tighten down to 12ft-lbs. Shown in <u>Figure 1</u>.
- 2. Assemble lever handle (D) either direction on to the carriage bolt and attach nylock nut (E) tight enough to still allow the handle to pivot. Shown in Figure 2.

Note: Figure 2 shows the default position.

3. Attach spring (F) to the hole on the bracket and then the hole in the lever handle. Shown in Figure 3.

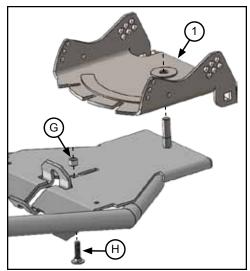

"Figure 4"

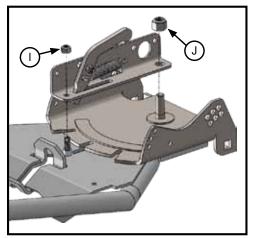


"Figure 5"


4. Set KFI Cradle (1) onto the CC tube system. Insert carriage bolt (H) up through the CC tube system plate and set spacer (G) over it. Shown in Figure 4.

- 5. Set the lever bracket on to the cradle, lining up the two holes. Attach nylock nut (J) to the CC tube, mounting the lever bracket and cradle Shown in Figure 5.
- Attach the nylock nut (I) to the carriage bolt holding the back of the lever bracket in place and tighten down. Shown in Figure 5.
- Tighten down nylock nut (J) and make sure that you can still rotate the cradle side to side.


## **Installation Instructions**

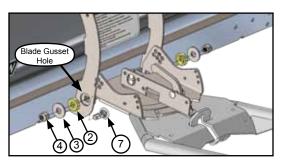

"Figure 6" Pivot Bolt Assembly

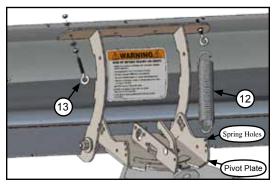

"Figure 7" Spring Assembly

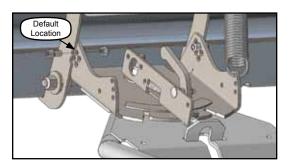


"Figure 8" Pitch Adjustment Bolt (One spring not shown for clarity.)

- 1. To secure the blade to the tube system, place the washer bearing (Item 2) with the countersink facing inward toward the cradle into the blade gusset hole. Secure the tube system and the blade together with the 1½" carriage bolt, 5/8" flat washer and lock nut, as shown in Figure 6. Repeat on other side.
- Insert the plow springs (Item 12) into the top smaller rear holes in the pivot plate, as shown in Figure 7. Place the eyebolts (Item 13) onto the end of the plow springs and secure the eyebolts onto the plow blade gusset, as shown in Figure 7. Leave spring tension loose as you will decide tension in Step 5.
- Assemble on machine and decide desired pitch of blade. Each hole is 5 degrees of blade pitch adjustment.

Note: Figure 8 shows the default position.

- 4. With springs installed pitch blade under tension and install 3/4" hex socket head cap screw with 3/8" Allen wrench or pliers, and 7/16" lock nut into desired pitch position hole, as shown in "Figure 8".
- Tighten nuts down on eye bolt until desired spring tension is reached.


Note: For each 1/4" that the nut is tightened it will add 12 lbs of spring tension.

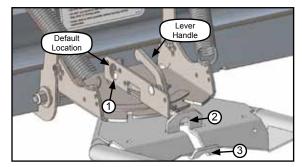

"Figure 9" Lift Hook Attachment Position

6. The CC tube system has 3 positions for the Lift Hook Bracket.

**Position 1** is the default position for your CC tube system previously assembled.

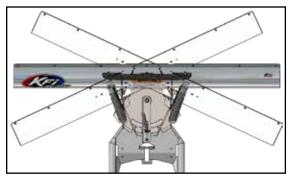


"Figure 10" Blade Rotation Angle



"Figure 11" Tube System Attachment

7. The tube system has three positions of rotation for your blade (Figure 10). In order to make each adjustment you will need to pull on the lever handle. (Figure 9) and rotate your blade left or right until you reach the desired angle.

8. To attach the tube system to your mount, position the tube system (with blade installed) under the front of your UTV. Raise tube attach points to the mount and line up the holes on mount plate with the holes in the tube system. Insert attachment pin through holes and secure on other side with clips as shown in Figure 11.

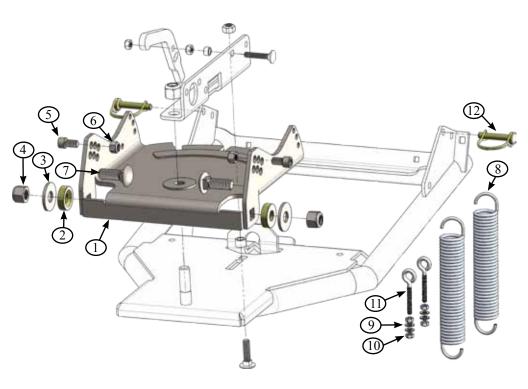

This Cradle kit will require a Cycle Country Plow Push Tube, a vehicle specific Plow Mount and Winch for lifting the system.

#### Part # - 105915 Parts List

ITEM	PART#	DESCRIPTION	QTY.
1	105916	WLDMT - CC CONVERSION PLOW CRADLE	1
2	105214	PITCH BUSHING	2
3	FW-USS-0625	5/8" FLAT WASHER, USS	2
4	HNNL-ZP-0625-11	5/8"-11 NYLOCK NUT	2
5	SK-0437-14-0_750	7/16"-14 X 3/4" HEX S.H.C. SCREW	2
6	HNNL-ZP-0437-14	7/16"-14 NYLOCK NUT	2
7	CB-ZP-0625-11-1_50	5/8"-11 X 1 1/2" CARRIAGE BOLT	2
8	P800304	PLOW SPRING	2
9	FW-SAE-ZP-0313	5/16" FLAT WASHER, SAE	4
10	HN-ZP-0313-18	5/16"-18 HEX NUT	4
11	P800249	5/16-18 x 9/16 x 3-3/8" EYEBOLT	2
12	P800250	PIN - 3/8" HITCH	2



# 2 Year Limited Warranty

Kappers Fabricating, Inc. (KFI) warrants to the original purchaser that the product is free from defects in materials and workmanship for a period of two (2) years from the original date of purchase. We will repair or replace, at our discretion, parts found to be defective due to materials or workmanship. This warranty is subject to the following limitations and exclusions:

**Commercial Use:** The warranty period for any product used for commercial or rental is limited to ninety (90) days from the date of original purchase.

**Limitations:** This warranty applies only to products which have been properly assembled, adjusted, and operated in accordance with the instructions contained within this manual. This warranty does not apply to any product of Kappers Fabricating, Inc. that has been subject to alteration, misuse, abuse, improper assembly or installation, or shipping damage.

Exclusions: Excluded from this warranty are normal wear, normal adjustments, and normal maintenance.

THIS WARRANTY DOES NOT APPLY TO ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES AND ANY IMPLIED WARRANTIES ARE LIMITED TO THE SAME TIME PERIODS STATED HEREIN FOR ALL EXPRESSED WARRANTIES.

THE WARRANTY SET FORTH ABOVE IS THE ONLY WARRANTY. THERE ARE NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

Some states do not allow the exclusion of implied warranties or the exclusion or limitation of liability for incidental or consequential damages, or limitations on how long an implied warranty lasts, so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights. You may also have other rights that vary from state to state.

In the event you have a claim under this warranty, contact KFI's Technical Service and KFI will troubleshoot any issue via phone or e-mail. If the problem is not corrected by this method, KFI will, at its option, authorize evaluation, repair or replacement of the defective part or component at a KFI Service Center. KFI will provide you with a case number for warranty service. Please keep it for future reference. Repairs or replacements without prior authorization, or at an unauthorized repair facility, will not be covered by this warranty.

All transportation charges, damage, or loss incurred during transportation of parts submitted for replacement or repair under this warranty shall be borne by the purchaser. Should you have any questions concerning this warranty, please contact us toll-free at 1-877-346-2050. The model number, serial number (If applicable), date of purchase, and the name of the authorized KFI dealer from whom you purchased the product will be needed before any warranty claim can be processed.

For warranty inquiries outside the U.S.A. and Canada, contact your local dealer/distributor.

For countries not covered by a local dealer/distributor, please contact us at www.kfiproducts.com.

#### **Product Registration**

issues that may arise by fillin Failure to complete and return	with Kappers Fabricating, Inc. (KFI) wit g out this Registration card and submitt n this Registration card does not dimini- tion for complete terms of this warranty. ANSFERABLE	ing it with a copy of your sales receips your warranty rights. Fill Kaj Wa 101	2 3 3
Street Address			
City	State	Zip Code	

\_\_\_\_\_ Email\_\_\_\_ Authorized KFI Dealer Name\_

Fax

Phone.

Date of Purchase



#### KFI Products

721 Sata Drive Spring Valley, MN 55975

1-877-346-2050